


SAMSUNG

เตาอบไมโครเวฟ

คำแนะนำและคู่มือทำอาหารของผู้ใช้

M1827N / M1817N

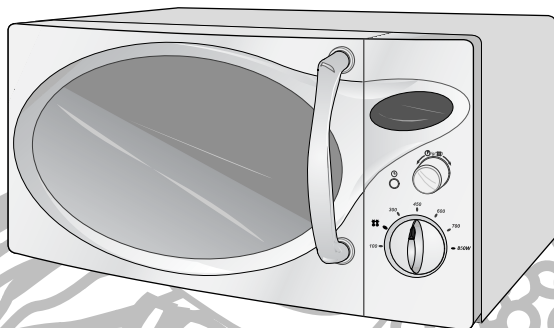


คำสั่งใช้งานอย่างรวดเร็ว	2
เตาอบ	3
อุปกรณ์เสริม	3
แผงควบคุม	4
วิธีใช้หนังสือแนะนำนี้	5
ข้อควรระวังในด้านความปลอดภัย	6
การติดตั้งเตาอบไมโครเวฟ	7
การตั้งเวลา(M1827N)	8
วิธีใช้เตาอบไมโครเวฟ	8
การตรวจว่าเตาอบทำงานได้อย่างถูกต้อง	9
วิธีแก้ไขเมื่อเกิดปัญหาหรือข้อสงสัย	9
การทำอาหาร/การอุ่น	10
ระดับความร้อน	10
การหยุดทำอาหาร	11
การปรับเวลาทำอาหาร	11
การละลายน้ำแข็งในอาหารด้วยตนเอง(M1817N)	12
การใช้คุณสมบัติละลายน้ำแข็งด้วยความร้อนอัตโนมัติ(M1827N)	12
การตั้งค่าละลายน้ำแข็งด้วยความร้อนอัตโนมัติ(M1827N)	12
การใช้คุณสมบัติอุ่นทันที(M1817N)	13
การตั้งอุ่นทันที(M1817N)	13
คำแนะนำเกี่ยวกับภาชนะที่ใช้ทำอาหาร	14
คำแนะนำในการทำอาหาร	15
การทำความสะอาดเตาอบไมโครเวฟ	20
การเก็บรักษาและซ่อมบำรุงเตาอบไมโครเวฟ	21
ลักษณะจำเพาะทางเทคนิค	21

คำสั้งใช้งานอย่างรวดเร็ว


TA

รุ่น : M1827N

 หากท่านต้องการทำอาหาร




 1. วางอาหารในเตาอบ
เลือกระดับความร้อนโดยหมุนปุ่ม **ตั้งระดับความร้อน (COOKING POWER CONTROL)**




2. เลือกเวลาการทำอาหารโดยหมุนปุ่ม **เวลา/ น้ำหนัก (Time/ Weight) (๐/g(กรัม))**
ผล: เครื่องเริ่มทำงานหลังจากกดปุ่มไปแล้ว 2 วินาที

 หากท่านต้องการละลายน้ำแข็งในอาหารบางชนิด




 1. หมุนปุ่ม **ตั้งระดับความร้อน (COOKING POWER CONTROL)** ไปที่สัญลักษณ์ **ละลายน้ำแข็งด้วยความร้อนอัตโนมัติ (Auto Defrost) (๙๙)**



2. หมุนปุ่ม **เวลา/ น้ำหนัก (Time/ Weight) (๐/g(กรัม))** เพื่อเลือกน้ำหนักที่เหมาะสม
ผล: เครื่องเริ่มทำงานหลังจากกดปุ่มไปแล้ว 2 วินาที

 
หากท่านต้องการปรับเวลาการทำอาหาร




- วางอาหารในเตาอบ
หมุนปุ่ม **เวลา/ น้ำหนัก (Time/ Weight) (๐/g(กรัม))** ไปที่เวลาที่ต้องการ

รุ่น : M1817N

หากท่านต้องการทำอาหาร

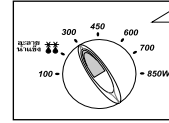


 1. วางอาหารในเตาอบ
เลือกระดับความร้อนโดยหมุนปุ่ม **ตั้งระดับความร้อน (COOKING POWER CONTROL)**




2. เลือกเวลาการทำอาหารโดยหมุนปุ่ม **ตั้งเวลา (TIMER)**

 หากท่านต้องการละลายน้ำแข็งในอาหารบางชนิด




 1. หมุนปุ่ม **ตั้งระดับความร้อน (COOKING POWER CONTROL)** ไปที่สัญลักษณ์ **ละลายน้ำแข็งด้วยตนเอง (Manual Defrost) (๙๙)**



2. หมุนปุ่ม **ตั้งเวลา (TIMER)** เพื่อเลือกเวลาที่เหมาะสม

 
หากท่านต้องการปรับเวลาการทำอาหาร




1. วางอาหารในเตาอบ
หมุนปุ่ม **ตั้งเวลา (TIMER)** เพื่อเลือกเวลาที่ต้องการ

เตาอบ

รุ่น : M1827N

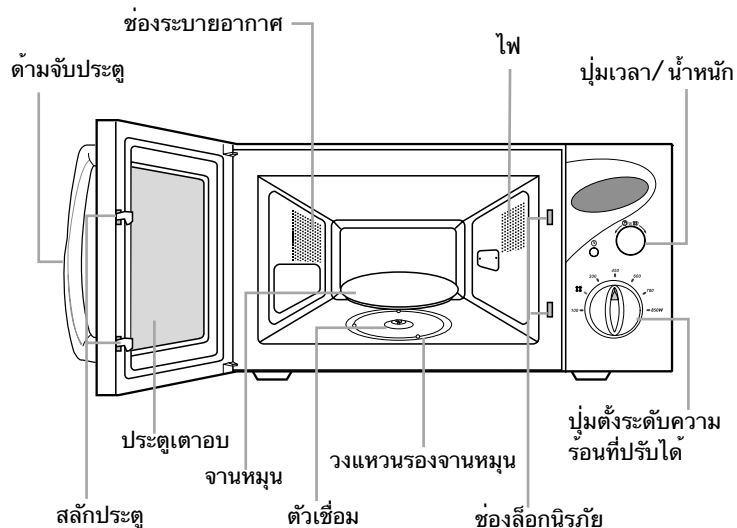


รุ่น : M1817N

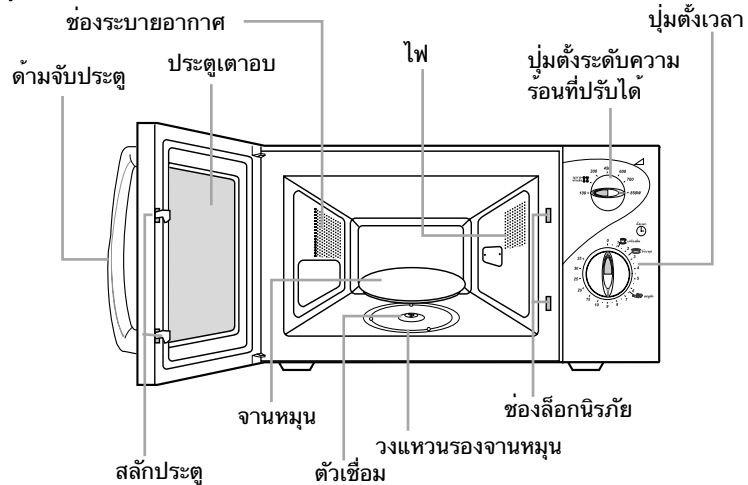


อุปกรณ์เสริม

 
ท่านจะได้รับอุปกรณ์เสริมต่างๆ ซึ่งสามารถใช้ได้หลายวิธี
ทั้งนี้ขึ้นอยู่กับรุ่นของเตาอบที่ซื้อ



 1. **ตัวเชื่อม** วางอยู่บนเพลามอเตอร์ที่พื้นของเตาอบ
วัตถุประสงค์: ตัวเชื่อมจะหมุนจานหมุน



 2. **วงแหวนรองจานหมุน** ต้องวางไว้ส่วนกลางของเตาอบ
วัตถุประสงค์: วงแหวนรองจานหมุนจะรองรับจานหมุน



3. **จานหมุน** ต้องวางไว้บนวงแหวนรองจานหมุนโดยที่ให้ตรงกลางอยู่ตรงกับตัวเชื่อม
วัตถุประสงค์: จานหมุนทำหน้าที่เป็นพื้นที่ทำอาหารหลักซึ่งสามารถถอดออกทำความสะอาดได้ง่าย




ห้ามใช้งานเตาอบไมโครเวฟโดยไม่ใช้วงแหวนรองจานหมุนและจานหมุน

แผงควบคุม


TA

รุ่น : M1827N

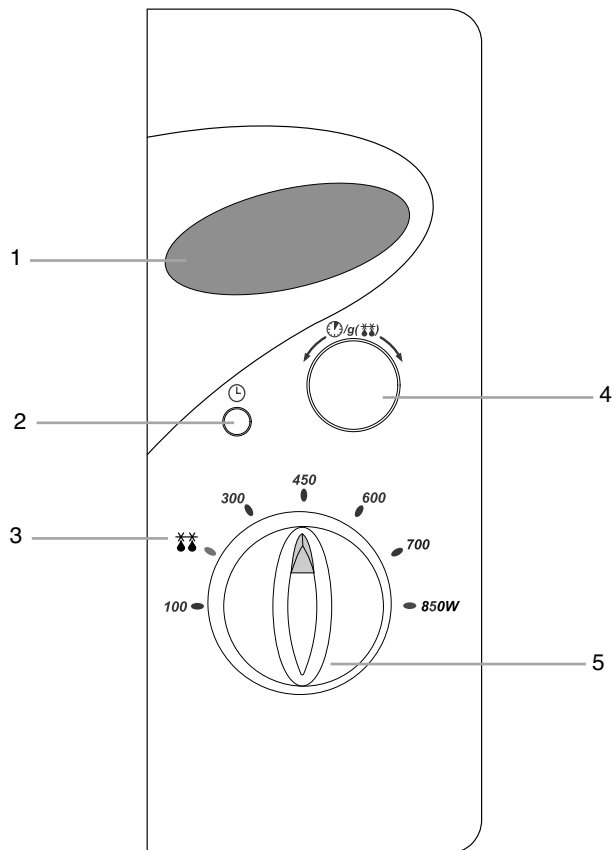

1. จอแสดงผล
2. ปุ่มตั้งนาฬิกา
3. ละลายน้ำแข็งด้วยความร้อนอัตโนมัติ
4. ปุ่มเวลา/น้ำหนัก
5. ปุ่มตั้งระดับความร้อนที่ปรับได้

รุ่น : M1817N

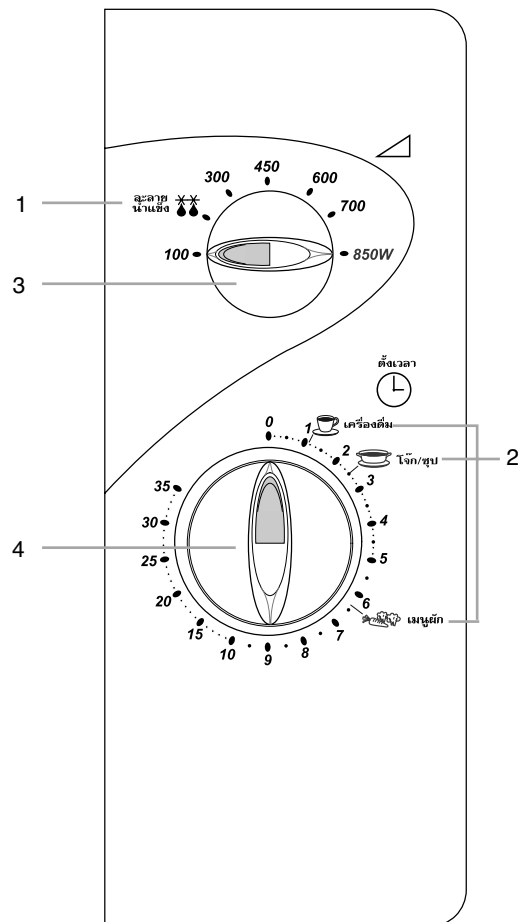

1. ละลายน้ำแข็งด้วยตนเอง
2. อุณหภูมิ
3. ปุ่มตั้งระดับความร้อนที่ปรับได้
4. ปุ่มตั้งเวลา

วิธีใช้หนังสือแนะนำนี้

สำหรับท่านที่ได้ซื้อเตาอบไมโครเวฟ SAMSUNG คำแนะนำสำหรับ
ผู้ใช้จะมีข้อมูลสำคัญเกี่ยวกับการทำอาหารด้วยเตาอบไมโครเวฟดังนี้:

- ข้อควรระวังในด้านความปลอดภัย
- อุปกรณ์เสริมและเครื่องครัวที่เหมาะสม
- เคล็ดลับที่มีประโยชน์เกี่ยวกับการทำอาหาร

ด้านในมีการอธิบายการใช้งานอย่างง่าย ๆ 3 หัวข้อ คือ:

- การทำอาหาร
- การละลายน้ำแข็งในอาหาร
- การเพิ่มเวลาทำอาหาร

ในช่วงตอนต้นของหนังสือ จะเป็นภาพของเตาอบ

และรวมทั้งแผงควบคุม ซึ่งเป็นสิ่งสำคัญยิ่ง

สำหรับการที่จะช่วยให้ท่านใช้ปุ่มต่างๆ ได้อย่างง่ายดายมากยิ่งขึ้น

ขั้นตอนแต่ละขั้นใช้สัญลักษณ์สามแบบ คือ



สิ่งสำคัญ



หมายเหตุ



หมุน

ข้อควรระวังเพื่อหลีกเลี่ยงการรับพลังงานไมโครเวฟมากเกินไป
ท่านอาจได้รับพลังงานไมโครเวฟในระดับที่เป็นอันตราย หากไม่ปฏิบัติตามข้อควรระวัง
ด้านความปลอดภัยดังต่อไปนี้

- (a) ห้ามใช้งานเตาอบโดยไม่ปิดฝาหรือกีดขวางตัวล็อกนิกภัย (ล็อกของประตู)
หรือเหยยสิ่งใดๆ ลงไปในช่อง ล็อกนิกภัย
- (b) ห้ามวางวัตถุใดๆ ระหว่างประตูเตาอบและ
พื้นที่ด้านหน้าหรือปล่อยให้มีเศษอาหารหรือน้ำ
ยาทำความสะอาดสะสมบริเวณพื้นผิวของตัวล็อก
ตรวจสอบให้แน่ใจว่าฝาปิดและพื้นผิวด้านในของประตูสะอาดโดยเช็ด
ทำความสะอาดหลังการใช้ครั้งแรกเช็ดด้วยผ้าเปียก จากนั้นเช็ดด้วยผ้าแห้งที่นุ่ม
- (c) หากเตาอบได้รับความเสียหาย
ห้ามใช้งานเตาอบจนกว่าจะได้รับการซ่อมแซมโดยช่างเทคนิคที่สามารถ
ให้บริการซ่อมแซมเตาอบไมโครเวฟและได้รับการฝึกอบรมจากผู้ผลิต ประตู
เตาอบจะต้องปิดอย่างถูกต้องและไม่มีความเสียหายเกิดขึ้นที่:
(1) ประตู สลักประตู และพื้นผิวของตัวล็อก
(2) บานพับประตู (หักหรือหลวม)
(3) สายไฟ
- (d) ห้ามเปลี่ยนแปลงหรือซ่อมแซมเตาอบเอง
หากมิใช่ช่างเทคนิคที่สามารถให้บริการซ่อมแซมเตาอบไมโครเวฟและ
ได้รับการฝึกอบรมจากผู้ผลิต

TA

ข้อควรระวังในด้านความปลอดภัย

TA

คำแนะนำในด้านความปลอดภัยที่สำคัญ
อ่านคำแนะนำอย่างละเอียดและโปรดเก็บรักษาไว้
ก่อนทำอาหารหรือต้มของเหลวในเตาอบไมโครเวฟ
โปรดตรวจดูว่าได้ปฏิบัติตามข้อควรระวังในด้านความปลอดภัยต่อไปนี้

1. ห้ามใช้เครื่องครัวโลหะที่มีลักษณะต่อไปนี้ในเตาอบไมโครเวฟ:

- ภาชนะโลหะ
- ชุดจานชามที่มีขอบทองหรือเงิน
- ไม่เสียบ ส้อม ฯลฯ

เนื่องจาก: อาจเกิดไฟช็อตหรือประกายไฟขึ้นและทำให้เกิดความเสียหายต่อเตาอบ

2. ห้ามอุ่น:

- ขวดกระปุก ภาชนะที่ปิดผนึกสุญญากาศหรือไม่มีอากาศผ่านเข้าไป เช่น กระปุกอาหารสำหรับทารก
- อาหารที่ไม่มีอากาศผ่านเข้าไป เช่น ไข่ ถั่วที่มีเปลือก มะเขือเทศ

เนื่องจาก: แรงดันที่เพิ่มขึ้นอาจทำให้ระเบิดได้

ขอแนะนำ: เปิดฝาและเจาะรูที่พื้นผิวถุง ฯลฯ

3. ห้ามใช้เตาอบไมโครเวฟเมื่อเตาอบว่าง

เนื่องจาก: ผนังเตาอบอาจได้รับความเสียหาย

ขอแนะนำ: วางน้ำหนึ่งแก้วไว้ในเตาอบตลอดเวลา

น้ำจะดูดซับคลื่นไมโครเวฟหากท่านตั้งเตาอบให้ทำงาน
โดยบังเอิญในขณะที่เตาอบว่าง

4. ห้ามใช้ผ้าหรือกระดาษปิดช่องระบายอากาศด้านหลัง

เนื่องจาก: ผ้าหรือกระดาษอาจติดไฟในขณะที่ลมร้อนพัดออกจากเตาอบ

5. ใช้ถุงมือสำหรับเตาอบเสมอเมื่อนำจานออกจากเตาอบ

เนื่องจาก: จานบางประเภทจะดูดคลื่นไมโครเวฟและความร้อนมักจะ
ถ่ายเทจากอากาศไปสู่จาน ทำให้จานเกิดความร้อน

6. ห้ามสัมผัสส่วนทำความร้อนหรือผนังเตาอบด้านใน

เนื่องจาก: ผนังเตาอบร้อนจนทำให้เกิดแผลไหม้ได้แม้ภายหลังการทำอาหาร
แม้ว่าจะดูคล้ายไม่ร้อนก็ตาม ห้ามปล่อยให้วัสดุติดไฟได้สัมผัสกับ
บริเวณด้านในของเตาอบ ปล่อยให้เตาอบเย็นลง

7. เพื่อลดความเสี่ยงจากการเกิดไฟลุกไหม้ในเตาอบ:

- ห้ามเก็บวัสดุติดไฟในเตาอบ
- นำหลอดออกจากถาดกระดาษหรือพลาสติก
- ห้ามใช้เตาอบไมโครเวฟเพื่ออบหนังสือพิมพ์ให้แห้ง
- หากเห็นควัน ให้ปิดฝาและปิดสวิตช์หรือถอดปลั๊กไฟของเตาอบ

8. ระวังเป็นพิษเมื่ออุ่นของเหลวและอาหารทารก

- ปล่อยให้เย็นอย่างน้อย 20 นาที **เสมอ** หลังจากปิดสวิตช์เตาอบ
แล้วเพื่อให้อุณหภูมิกระจายสม่ำเสมอ
- คนอาหารระหว่างการอุ่นหากจำเป็นและคนหลังจากอุ่นแล้วเสมอ

- ระวังเมื่อหยิบจับภาชนะหลังการอุ่น
หากภาชนะร้อนเกินไปอาจทำให้เกิดแผลไหม้ได้
- อาจมีความเสี่ยงจากการเดือดที่ปะทุขึ้นในเวลาต่อมา
- เพื่อป้องกันการเดือดที่ปะทุขึ้นในเวลาต่อมาและการพุดองที่อาจเกิดขึ้น
ท่านควรวางซ้อนพลาสติกหรือไม้คั่นแก้วลงในเครื่องต้มและคนก่อน
ระหว่างและหลังการอุ่น

เนื่องจาก: ในการอุ่นของเหลว อาจถึงจุดเดือดซ้ำ
ซึ่งหมายความว่า การเดือดที่ปะทุอาจเกิดขึ้นหลังจากนำภาชนะออก
จากเตาอบแล้วและทำให้ท่านเกิดแผลพุพองได้

- ในกรณีที่เกิดแผลพุพอง โปรดปฏิบัติตามคำแนะนำในการปฐมพยาบาลดังนี้:
 - * แช่แผลที่พองในน้ำเย็นอย่างน้อย 10 นาที
 - * ปิดแผลด้วยผ้าพันแผลที่สะอาดและแห้ง
 - * ห้ามทาครีม น้ำมัน หรือโลชั่นใดๆ
- ห้ามใส่ของเหลวจนเต็มภาชนะและเลือกภาชนะที่ด้านบนกว้างกว่าด้านล่าง
เพื่อป้องกันไม่ให้ของเหลวล้น ขวดที่มีคอขวดแคบอาจจะเปิดได้หากร้อนเกินไป
- ตรวจสอบอุณหภูมิของอาหารทารกหรือนมก่อนบ้วนให้ทารก **เสมอ**
- ห้ามอุ่นขวดของทารกพร้อมจุกขวดนมเพราะขวดอาจจะเปิดได้หากร้อนเกินไป

9. ระวังมีไฟสายไฟเกิดความเสียหาย

- ห้ามจุ่มสายไฟหรือปลั๊กไฟในน้ำและเก็บสายไฟให้ห่างจากพื้นผิวที่ไ้
รับความร้อน
- ห้ามใช้เครื่องหากสายไฟหรือปลั๊กไฟได้รับความเสียหาย

10. ยืนห่างจากเตาอบหนึ่งช่วงแขนเมื่อเปิดฝา

เนื่องจาก: ลมหรือไอร้อนที่ปล่อยออกมาอาจทำให้เกิดแผลพุพองได้

11. รักษาความสะอาดด้านในของเตาอบ

เนื่องจาก: เศษอาหารหรือน้ำมันที่กระเด็นซึ่งติดอยู่กับผนังหรือพื้นของเตาอบ
อาจทำความเสียหาย ทำให้สูญเสียและลดประสิทธิภาพของเตาอบ

12. ท่านอาจได้ยินเสียง แคร็กระหว่างการทำงาน

(โดยเฉพาะเมื่อเตาอบละลายน้ำแข็ง)

เนื่องจาก: เสียงนี้เป็นเสียงปกติเมื่อไฟฟ้าที่ส่งออกมาเปลี่ยนสภาพไป

13. เมื่อเตาอบไมโครเวฟทำงานโดยที่ไม่มีอาหารใดๆ

ไฟฟ้านี้จะตัดโดยอัตโนมัติเพื่อความปลอดภัย ท่านสามารถใช้งาน
ได้เป็นปกติหลังจากปล่อยให้เย็นนานกว่า 30 นาที

คำแนะนำในด้านความปลอดภัยที่สำคัญ

ระหว่างการทำอาหาร ควรดูในเตาอบเป็นระยะๆ เมื่ออุ่นหรือทำอาหาร
ในภาชนะพลาสติก กระดาษ หรือวัสดุที่ไหม้ไฟได้และที่ใช่แล้วทั้ง

สิ่งสำคัญ

ห้ามมิให้เด็กเล็กใช้หรือเล่นเตาอบไมโครเวฟ

หรือปล่อยให้เด็กอยู่ใกล้กับเตาอบไมโครเวฟในขณะที่กำลังทำงานโดยไม่มีผู้
อื่นดูแล ไม่ควรที่จะเก็บหรือซ่อนสิ่งที่เด็กสนใจไว้ในเตาอบ

ข้อควรระวังในด้านความปลอดภัย (ต่อ)

ข้อควรระวัง

หากประตูหรือสลักประตูเตาอบชำรุดเสียหาย ห้ามใช้งานเตาอบจนกว่าจะได้รับการซ่อมแซมโดยช่างเทคนิคที่สามารถให้บริการซ่อมแซมเตาอบไมโครเวฟ และได้รับการฝึกอบรมจากผู้ผลิต

ข้อควรระวัง

ห้ามไม่ให้ผู้อื่นที่มีใช้ช่างเทคนิคที่มีคุณสมบัติเพียงพอดำเนินการซ่อมแซมโดยการถอดฝาเตาอบซึ่งเป็นส่วนที่ป้องกันการปะทุของพลังงานในเตาอบเนื่องจากอาจทำให้เกิดอันตรายร้ายแรงได้

ข้อควรระวัง

 
ห้ามอุ่นของเหลวและอาหารอื่นในภาชนะปิดผนึกเนื่องจากอาจทำให้ระเบิดได้

ข้อควรระวัง

หากไม่มีผู้ควบคุมดูแล จะอนุญาตให้เด็กใช้เตาอบได้ต่อเมื่อมีการให้คำแนะนำวิธีใช้ที่ถูกต้องแล้วเท่านั้น เพื่อให้เด็กสามารถใช้เตาอบได้อย่างปลอดภัยและเข้าใจถึงอันตรายที่อาจเกิดขึ้นจากการใช้ที่ไม่เหมาะสม

การติดตั้งเตาอบไมโครเวฟ

วางเตาอบบนพื้นผิวที่แบนราบซึ่งแข็งแรงพอที่จะรับน้ำหนักของเตาอบได้อย่างปลอดภัย



- เมื่อติดตั้งเตาอบ ตรวจสอบให้แน่ใจว่ามีทางระบายอากาศที่พอเหมาะสำหรับเตาอบโดยปล่อยให้มีที่ว่างด้านหลังและด้านข้างอย่างน้อย 10 ซม. (4 นิ้ว) และด้านบนของเตาอบอย่างน้อย 20 ซม. (8 นิ้ว)
- นำวัสดุหีบห่อด้านในของเตาอบออกให้หมด ติดตั้งวงแหวนรองจานหมุนและจานหมุน ตรวจสอบว่าจานหมุนหมุนได้อย่างอิสระ
- เตาอบไมโครเวฟต้องตั้งในที่ซึ่งสามารถเสียบปลั๊กได้



ห้าม ขวางช่องอากาศ

เนื่องจากเตาอบอาจร้อนเกินไปและเครื่องจะหยุดทำงานโดยอัตโนมัติ ซึ่งจะไม่สามารถใช้งานได้จนกระทั่งเย็นลงเพียงพอ



เพื่อความปลอดภัยของท่าน ต่อสายไฟเข้ากับเต้าเสียบสายดิน 3 ตา 220 โวลต์ 50 เฮิรตซ์ หากสายไฟของเครื่องได้รับความเสียหาย ต้องเปลี่ยนด้วยสายพิเศษ (I-SHENG SP022, KDK KKP4819D, EUROELECTRIC 3410, SAMIL SP-106b, MOONSUNG EP-48E, HIGHT PROJECT H.P3) โปรดติดต่อตัวแทนจำหน่าย, เพื่อขอถิ่นของท่านเพื่อเปลี่ยนสายไฟ สายไฟของอิสราเอลคือ PENCON(ZD16A) แอฟริกาใต้คือ APEX LEADS SA16 และไนจีเรีย กานา เคนยาและสหรัฐอาหรับเอมิเรตคือ PENCON (UD13A1)



ห้ามติดตั้งเตาอบไมโครเวฟในสภาพแวดล้อมที่ร้อนหรือชื้น เช่น ติดกับเตาอบ หรือเครื่องทำความร้อน

 
คุณสมบัติของสายไฟของเตาอบต้องได้มาตรฐานและสายต่อใดๆ ที่ใช้ต้องได้มาตรฐานเดียวกับสายไฟที่ให้ไว้กับเตาอบ เช็ดภายในและแถบฉนวนฝาปิดด้วยผ้าชื้นก่อนใช้เตาอบไมโครเวฟ ในครั้งแรก

การตั้งเวลา(M1827N)

TA


เตาอบไมโครเวฟมีนาฬิกาในตัว ซึ่งจะแสดงเวลาเป็นแบบ 24 ชั่วโมงหรือ 12 ชั่วโมง ท่านต้องตั้งนาฬิกาเมื่อ:

- ติดตั้งเตาอบไมโครเวฟเป็นครั้งแรก
- หลังจากไฟฟ้าดับ




1. เพื่อแสดงเวลาใน..
แบบ 24 ชั่วโมง
แบบ 12 ชั่วโมง

 
กดปุ่ม ...
หนึ่งครั้ง
สองครั้ง



 
2. หมุนปุ่ม เวลา/ น้ำหนัก (Time/ Weight)(/g(กรัม))
เพื่อตั้งเวลาเป็นชั่วโมง



 3. กดปุ่ม



 4. หมุนปุ่ม เวลา/ น้ำหนัก (Time/ Weight)(/g(กรัม))
เพื่อตั้งเวลาเป็นชั่วโมง



5. กดปุ่ม


วิธีใช้เตาอบไมโครเวฟ

ไมโครเวฟเป็นคลื่นแม่เหล็กไฟฟ้าความถี่สูง พลังงานที่ปล่อยออกมาสามารถทำให้อาหารสุกหรืออุ่นได้โดยไม่ต้องเปลี่ยนรูปแบบหรือสีของอาหาร

ท่านสามารถใช้เตาอบไมโครเวฟเพื่อ:

- ละลายน้ำแข็ง
- ทำอาหาร
- อุ่น

• หลักการทำอาหาร

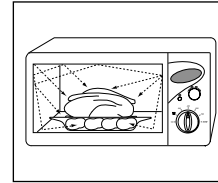

1. ไมโครเวฟซึ่งเกิดจากแมกนีตรอนจะกระจายเสมอกันในขณะที่อาหารหมูนอยู่บนจาน ดังนั้นอาหารจึงสุกเท่าๆ กัน
2. อาหารที่มีความลึกประมาณ 1 นิ้ว (2.5 ซม.) จะดูดซับไมโครเวฟ ดังนั้นการทำอาหารจะต่อเนื่องจากการที่ความร้อนกระจายไปภายในอาหาร
3. เวลาทำอาหารจะแตกต่างกันไปขึ้นอยู่กับภาชนะที่ใช้และคุณสมบัติของอาหาร เช่น:
 - ปริมาณและความหนาแน่น
 - ปริมาณน้ำ
 - อุณหภูมิเริ่มต้น (แช่แข็งหรือไม่)



เนื่องจากส่วนกลางของอาหารถูกทำให้สุกโดยการกระจายความร้อน การทำอาหารจะดำเนินต่อไปแม้เมื่อนำอาหารออกจากเตาอบแล้ว ดังนั้นจึงต้องปล่อยให้พักตามกำหนดไว้ในตำราอาหารและในหนังสือเล่มนี้เพื่อให้แน่ใจว่า:

 
- อาหารสุกเท่ากับตรงกลาง
- อาหารมีอุณหภูมิเท่ากันทั่วถึง

การตรวจว่าเตาอบทำงานได้อย่างถูกต้อง


ขั้นตอนง่ายๆ ต่อไปนี้จะช่วยในการตรวจสอบว่าเตาอบทำงานได้อย่างถูกต้องตลอดเวลา

ขั้นแรกวางน้ำหนึ่งชามบนจานหมุนจากนั้นปิดประตูเตาอบ

รุ่น : M1827N



 
1. เลือกระดับความร้อนได้จนถึงระดับสูงสุด โดยหมุนปุ่ม **ตั้งระดับความร้อน (COOKING POWER CONTROL)**




2. เลือกเวลา 4 ถึง 5 นาที โดยหมุนปุ่ม **เวลา/ น้ำหนัก (Time/ Weight) (๐๑/๕๕)** จากนั้นน้ำจะเดือด

ผล: เครื่องเริ่มทำงานหลังจากกดปุ่มไปแล้ว 2 วินาที

 รุ่น : M1817N



 1. เลือกระดับความร้อนได้จนถึงระดับสูงสุด โดยหมุนปุ่ม **ตั้งระดับความร้อน (COOKING POWER CONTROL)**



2. เลือกเวลา 4 ถึง 5 นาที โดยหมุนปุ่ม **ตั้งเวลา (TIMER)** จากนั้นน้ำจะเดือด



เตาอบจะต้องเสียบเข้ากับเต้าเสียบติดผนังที่เหมาะสม
จานหมุนต้องอยู่ในตำแหน่งที่ถูกตั้ง
หากใช้ระดับความร้อนอื่นที่ไม่ใช่ระดับความร้อนสูงสุด
จะต้องใช้เวลาในการต้มนานกว่าเดิม

วิธีแก้ไขเมื่อเกิดปัญหาหรือข้อสงสัย

หากเกิดปัญหาใดๆ ต่อไปนี้ให้ลองใช้วิธีแก้ไขที่ระบุไว้

- ◆ สิ่งต่อไปนี้ เป็นเรื่องปกติ
 - เกิดไอน้ำภายในเตาอบ
 - อากาศที่หมุนเวียนรอบฝาปิดและเตาอบด้านนอก
 - มีการสะท้อนแสงรอบประตูและเตาด้านนอก
 - ไอน้ำล่อออกจากประตูและช่องระบายอากาศ
- ◆ เตาอบจะไม่เริ่มทำงานเมื่อหมุนปุ่ม **เวลา/ น้ำหนัก (Time/ Weight) (๐๑/๕๕)** (M1827N)
 - ปิดฝาสนิทหรือไม่
- ◆ เตาอบจะไม่เริ่มทำงานเมื่อหมุนปุ่ม **ตั้งเวลา (TIMER)** (M1817N)
 - ปิดฝาสนิทหรือไม่
- ◆ อาหารไม่สุก
 - ทานตั้งเวลาถูกต้อง และ/ หรือหมุนปุ่ม **เวลา/ น้ำหนัก (Time/ Weight) (๐๑/๕๕)** หรือไม่? (M1827N)
 - ทานตั้งเวลาถูกต้องหรือไม่? (M1817N)
 - ปิดฝาแล้วหรือไม่
 - มีการจ่ายกระแสไฟฟ้ามากเกินไปและทำให้ฟิวส์หรือเบรกเกอร์ระเบิดหรือไม่
- ◆ อาหารสุกเกินไปหรือดิบเกินไป
 - เวลาทำอาหารตั้งไว้เหมาะสมกับชนิดของอาหารหรือไม่
 - ระดับความร้อนเหมาะสมหรือไม่
- ◆ ประกายไฟและมีเสียงแคร็กภายในเตาอบ (เกิดประกายไฟ)
 - ไขมันที่มีขอบเป็นโลหะหรือไม่
 - วางส้อมหรือเครื่องใช้โลหะอื่นๆ ไว้ในเตาอบหรือไม่
 - ฟอยล์อลูมิเนียมอยู่ใกล้กับผนังด้านในเกินไปหรือไม่
- ◆ เตาอบทำให้เกิดกลิ่นรบกวนวิทยุหรือโทรทัศน์
 - อาจเกิดคลื่นรบกวนขึ้นเล็กน้อยกับโทรทัศน์หรือวิทยุเมื่อเตาอบทำงาน ซึ่งเป็นเรื่องปกติ เพื่อแก้ปัญหานี้ ติดตั้งเตาอบให้ห่างจากโทรทัศน์ วิทยุและเสาอากาศ
 - หากไมโครโพรเซสเซอร์ของเตาอบตรวจพบคลื่นรบกวน อาจต้องตั้งจอแสดงผลใหม่ เพื่อแก้ปัญหานี้ ถอดปลั๊กไฟและเสียบปลั๊กใหม่ ตั้งเวลาอีกครั้ง (M1827N)



หากปฏิบัติตามคำแนะนำข้างต้นแล้วไม่สามารถแก้ปัญหาได้
โปรดติดต่อผู้แทนจำหน่ายในท้องถิ่นของท่านหรือฝ่ายบริการหลังการขายของ SAMSUNG

 
การทำอาหาร/การอุ่น

TA


วิธีการทำอาหารหรืออุ่นอาหารมีขั้นตอนดังต่อไปนี้
ตรวจสอบเสมอเมื่อตั้งค่าการทำอาหารก่อนปล่อยให้เตาอบทำงานโดยไม่เฝ้าดู

ขั้นแรก วางอาหารไว้ตรงกลางจานหมุน จากนั้นปิดฝา

รุ่น : M1827N




 1. เลือกระดับความร้อนได้จนถึงระดับสูงสุด โดยหมุนปุ่ม **ตั้งระดับความร้อน (COOKING POWER CONTROL)** (ระดับความร้อนสูงสุด: 850 วัตต์)




2. เลือกเวลาโดยหมุนปุ่ม **เวลา/ น้ำหนัก (Time/ Weight)** (0.5g (กรัม))
ผล: ไฟเตาอบจะสว่างขึ้นและจานเริ่มหมุน
1) เริ่มการทำอาหารและเมื่อทำอาหารเสร็จแล้วเตาอบจะส่งเสียงบี๊ฟสี่ครั้ง
2) เมื่อสิ้นสุดการทำงานจะมีสัญญาณเสียงบี๊ฟ 3 ครั้ง (นาฬิกาหนึ่งครั้ง)
3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

 รุ่น : M1817N



 1. เลือกระดับความร้อนได้จนถึงระดับสูงสุด โดยหมุนปุ่ม **ตั้งระดับความร้อน (COOKING POWER CONTROL)** (ระดับความร้อนสูงสุด: 850 วัตต์)



2. เลือกเวลาโดยหมุนปุ่ม **ตั้งเวลา (TIMER)**
ผล: ไฟเตาอบจะสว่างขึ้นและจานเริ่มหมุน



ห้ามกดปุ่มทำงานเมื่อเตาอบว่าง



ท่านสามารถเปลี่ยนระดับความร้อนในระหว่างการทำอาหารได้โดยหมุนปุ่ม **ตั้งระดับความร้อน (COOKING POWER CONTROL)**

ระดับความร้อน

ท่านสามารถเลือกระดับความร้อนได้ตามที่แสดงรายการไว้ด้านล่างนี้

ระดับความร้อน	กำลังไฟ
สูง	850 วัตต์
อุ่น	700 วัตต์
สูงระดับกลาง	600 วัตต์
กลาง	450 วัตต์
ต่ำระดับกลาง	300 วัตต์
ละลายน้ำแข็งด้วยตนเอง (❄️) : M1817N	180 วัตต์
ละลายน้ำแข็งด้วยความร้อนอัตโนมัติ (❄️) : M1827N	180 วัตต์
ต่ำ/อุ่น	100 วัตต์



หากเลือกระดับความร้อนสูงขึ้น เวลาทำอาหารจะต้องลดลง

 


หากเลือกระดับความร้อนต่ำลง เวลาทำอาหารจะต้องเพิ่มขึ้น


การหยุดทำอาหาร

ท่านสามารถหยุดทำอาหารเมื่อใดก็ได้เพื่อดูลักษณะอาหาร

รุ่น : M1827N



 
1. หากต้องการหยุดชั่วคราว เปิดฝาดูออก
ผล: เครื่องจะหยุดทำงาน หากต้องการทำอาหารต่อ ให้ปิดประตูเตาอบ




2. หากต้องการหยุดการทำงานทั้งหมด ให้หมุนปุ่ม **เวลา/ น้ำหนัก (Time/ Weight) (🕒/g(กรัม))** ไปด้านซ้าย; “0” จะปรากฏขึ้น

: 0

 รุ่น : M1817N



 
1. หากต้องการหยุดชั่วคราว เปิดฝาดูออก
ผล: เครื่องจะหยุดทำงาน หากต้องการทำอาหารต่อ ให้ปิดประตูเตาอบ



2. หากต้องการหยุดการทำงานทั้งหมด ให้หมุนปุ่ม; **ตั้งเวลา (TIMER)** ไปที่ “0”


การปรับเวลาทำอาหาร

 รุ่น : M1827N



ปรับเวลาการทำอาหารที่เหลือได้โดยหมุนปุ่ม **เวลา/ น้ำหนัก (Time/ Weight) (🕒/g(กรัม))** หมุนปุ่มไปทางขวาหรือซ้ายเพื่อเพิ่มเวลาทำอาหารในระหว่างการทำอาหาร

 รุ่น : M1817N



ปรับเวลาการทำอาหารที่เหลือได้โดยหมุนปุ่ม **ตั้งเวลา (TIMER)**

 
TA

การละลายน้ำแข็งในอาหารด้วยตนเอง (M1817N)


TA

คุณสมบัติละลายน้ำแข็งด้วยตนเอง (Manual Defrost)

ทำให้สามารถละลายน้ำแข็งในเนื้อ เนื้อสัตว์ปีก เนื้อปลา หรือผลไม้ได้ ก่อนอื่น ให้วางอาหารแช่แข็งไว้กลางจานหมุน และปิดประตูเตาอบ



 1. หมุนปุ่ม **ตั้งระดับความร้อน (COOKING POWER CONTROL)** ไปที่สัญลักษณ์ **ละลายน้ำแข็งด้วยตนเอง (Manual Defrost) (❄️)**



2. หมุนปุ่ม **ตั้งเวลา (TIMER)** เพื่อเลือกเวลาที่เหมาะสม
ผล: เริ่มการละลายน้ำแข็ง



ใช้ภาษาที่ใช้กับไมโครเวฟได้นั้น



 
เลือกฟังก์ชันการละลายน้ำแข็งด้วยตนเอง (Manual Defrosting) ที่มีระดับความร้อน 180 วัตต์

หากท่านต้องการละลายน้ำแข็งในอาหารด้วยตนเอง โปรดดูหัวข้อการละลายน้ำแข็งด้วยตนเองและเวลาในการละลายน้ำแข็ง (เฉพาะรุ่น M1817N เท่านั้น) ในหน้า 19 เพื่อทราบรายละเอียดเพิ่มเติม


การใช้คุณสมบัติละลายน้ำแข็งด้วยความร้อนอัตโนมัติ (M1827N)

คุณสมบัติละลายน้ำแข็งด้วยความร้อนอัตโนมัติ (Auto Defrosting)

ทำให้สามารถละลายน้ำแข็งในเนื้อ เนื้อสัตว์ปีก หรือเนื้อปลาได้ ก่อนอื่น ให้วางอาหารที่แช่แข็งไว้กลางจานหมุน และปิดประตูเตาอบ



 1. หมุนปุ่ม **ตั้งระดับความร้อน (COOKING POWER CONTROL)** ไปที่สัญลักษณ์ **ละลายน้ำแข็งด้วยความร้อนอัตโนมัติ (Auto Defrost) (❄️)**



2. หมุนปุ่ม **เวลา/ น้ำหนัก (Time/ Weight) (⌚/g (กก))** เพื่อเลือกน้ำหนักที่เหมาะสม

ผล: ไฟของเตาอบจะสว่างขึ้นและจานเริ่มหมุน

- 1) เริ่มการทำอาหาร และเมื่อทำอาหารเสร็จแล้วเตาอบจะส่งเสียงบี๊ฟส์ครั้ง
- 2) เมื่อสิ้นสุดการทำงานจะมีสัญญาณเสียงบี๊ฟ 3 ครั้ง (นาที่ละหนึ่งครั้ง)
- 3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง



ใช้ภาษาที่ใช้กับเตาไมโครเวฟได้นั้น

การตั้งค่าละลายน้ำแข็งด้วยความร้อนอัตโนมัติ (M1827N)

นำวัสดุบรรจุภัณฑ์ทุกชนิดออกก่อนละลายน้ำแข็ง

วางอาหารแช่แข็งไว้บนจานหมุน


พลิกกลับอาหารเมื่อมีเสียงบี๊ฟจากเตาอบ

- รักษาเวลาปล่อยพักให้สัมพันธ์กันหลังจากเสร็จสิ้นการละลายน้ำแข็งด้วยความร้อนอัตโนมัติ (Auto Defrosting)


อาหาร	ปริมาณ	เวลาปล่อยพัก	คำแนะนำ
เนื้อสัตว์	200-1500 ก.	20-60 นาที	ห่อขอบไว้ด้วยอลูมิเนียมฟอยล์
เนื้อสัตว์ปีก	200-1500 ก.	20-60 นาที	พลิกอาหารกลับเมื่อมีเสียงบี๊ฟจากเตาอบ
เนื้อปลา	200-1500 ก.	20-50 นาที	

การใช้คุณสมบัติอุ่นทันที(M1817N)

 ขั้นแรก วางอาหารไว้ตรงกลางจานหมุนและปิดฝา



 1. หมุนปุ่ม **ตั้งระดับความร้อน(COOKING POWER CONTROL)** ไปที่ความร้อนสูงสุด



2. หมุนปุ่ม **ตั้งเวลา(TIMER)** เพื่อเลือกการอุ่นทันที (Instant Reheat)
(เครื่องต้มหรือซุพ/ซอส ผักสด)



ใช้ภาชนะที่ใช้กับไมโครเวฟได้เท่านั้น

การตั้งอุ่นทันที(M1817N)

นี่คือเคล็ดลับและคำแนะนำบางประการให้
ปฏิบัติตามเมื่อทำอาหารหรืออุ่นอาหารด้วยคุณสมบัติอุ่นทันที (Instant Reheat) และทำอาหาร (Cooking)

สัญลักษณ์	อาหาร	ขนาดเสิร์ฟ	เวลาทำอาหาร	เวลาปล่อยพัก
เครื่องดื่ม	เครื่องดื่ม	150 มล.	1 นาที 5 วินาที	1 - 2 นาที
ซุป/ซอส	ซุพ/ซอส (แช่เย็น)	200-250 มล.	2 นาที 30 วินาที	2 - 3 นาที
ผักสด	ผักสด	300-350 ก.	6 นาที 20 วินาที	3 นาที

TA

คำแนะนำเกี่ยวกับภาชนะที่ใช้ทำอาหาร

ในการทำอาหารด้วยเตาอบไมโครเวฟ คลื่นไมโครเวฟจะต้องสามารถผ่านอาหารได้ โดยจานที่ใช้จะต้องไม่สะท้อนกลับหรือดูดซับคลื่นไว้ ดังนั้นจึงต้องใช้ความระมัดระวังในการเลือกภาชนะที่ใช้ทำอาหาร ควรเลือกภาชนะที่ใช้ทำอาหารที่มีเครื่องหมายแสดงว่าใช้ได้กับเตาอบไมโครเวฟเท่านั้น

ตารางต่อไปนี้จะแสดงรายการภาชนะที่ใช้ทำอาหารหลายแบบ และแสดงว่าควรใช้กับเตาอบไมโครเวฟหรือไม่และใช้อย่างไร

ภาชนะที่ใช้ทำอาหาร	ใช้ได้กับเตาอบไมโครเวฟ	ข้อแนะนำ
อลูมิเนียมฟอยล์	✓ X	สามารถใช้ได้ในจำนวนน้อยเพื่อปิดบริเวณที่ไม่ต้องการให้สุกเกินไป อาจเกิดไฟช็อตได้หากฟอยล์อยู่ใกล้กับผนังเตาอบเกินไปหรือใช้ฟอยล์มากเกินไป
จานสำหรับย่างอาหาร	✓	ห้ามอุ่นนานเกินกว่าแปดนาที
กระเบื้องเคลือบและดินเผา	✓	สามารถใช้พอร์ซเลน เครื่องปั้นดินเผา เครื่องดินเผาเคลือบมัน และเครื่องเคลือบไขนา หากไม่มีการแต่งขอบด้วยโลหะ
ภาชนะพลาสติกแบบใช้แล้วทิ้ง	✓	อาหารแช่แข็งบางชนิดจะบรรจุไว้ในจานประเภทนี้
บรรจุภัณฑ์ของฟาสต์ฟู้ด		
• ภาชนะถายโฟลีสตீริน	✓	ใช้อุ่นอาหารได้หากอุ่นนานเกินไปอาจทำให้โฟลีสตี่รินละลาย
• ถุงกระดาศหรือหนังสือพิมพ์	X	อาจทำให้เกิดไฟลุก
• กระดาศรีไซเคิล	X	อาจทำให้เกิดประกายไฟ

เครื่องแก้ว		
• ภาชนะที่ใช้ในเตาอบแล้วพร้อมวางบนโต๊ะ	✓	ใช้ได้หากไม่มีการแต่งขอบด้วยโลหะ
• เครื่องแก้วเนื้อดี	✓	ใช้อุ่นอาหารหรือของเหลวได้ เครื่องแก้วนี้อาจแตกหรือร้าวหากอุ่นในทันทีตองนำฝาดอก เหมาะสำหรับอุ่นเท่านั้น
• เขือกแก้ว	✓	
เครื่องโลหะ		
• จาน	X	อาจทำให้เกิดประกายไฟหรือเกิดเปลวไฟ
• ถุงแช่แข็งที่มีลวดผูกมัดไว้	X	
กระดาศ		
• จานถายผ้าเช็ดปากและกระดาศที่ใช้ในครัว	✓	ใช้ทำอาหารในเวลาสั้นๆ และอุ่นอาหารนอกจากนี้ยังช่วยดูดซับความชื้น
• กระดาศรีไซเคิล	X	อาจทำให้เกิดไฟช็อต
พลาสติก		
• ภาชนะ	✓	โดยเฉพาะหากใช้เธอร์โมพลาสติกที่ทนความร้อน พลาสติกชนิดนี้อาจงอหรือเปลี่ยนสีเมื่ออยู่ในอุณหภูมิสูง ห้ามใช้พลาสติกเมลามีน
• ฟิล์ม	✓	สามารถใช้เพื่อคงความชื้นไว้แต่ไม่ควรให้สัมผัสอาหาร โปรดระวังเมื่อดึงฟิล์มออกเนื่องจากไอร้อนจะออกมา
• ถุงแช่แข็ง	✓ X	เฉพาะถุงที่ต้มได้หรือทนความร้อนจากเตาอบได้เท่านั้น ควรจะเป็นแบบที่อากาศผ่านเข้าไม่ได้ให้ใช้ลอมจิมหากจำเป็น
กระดาศเคลือบไซหรือที่ไม่ซึมน้ำมัน	✓	สามารถใช้เพื่อคงความชื้นไว้ได้และป้องกันการกระเด็น

คำแนะนำในการทำอาหาร

ไมโครเวฟ

ตามจริงแล้ว คลื่นไมโครเวฟจะผ่านอาหารได้
ดูดซึมได้ด้วยส่วนที่เป็นน้ำ ไขมันและน้ำตาล
คลื่นไมโครเวฟทำให้โมเลกุลในอาหารเคลื่อนไหวอย่างรวดเร็ว
การที่โมเลกุลเคลื่อนไหวอย่างรวดเร็วนี้ทำให้เกิดแรงเสียดทานและความร้อน
ขึ้น ซึ่งจะทำให้อาหารสุก

การทำอาหาร

ภาชนะในการทำอาหารสำหรับการทำอาหารด้วยเตาไมโครเวฟ:
ภาชนะในการทำอาหารจะต้องให้คลื่นไมโครเวฟสามารถผ่านภาชนะได้มากที่สุด
โลหะเช่น สแตนเลส อลูมิเนียม และทองแดง
จะสะท้อนคลื่นไมโครเวฟ แต่คลื่นสามารถทะลุผ่านเซรามิค แก้ว พอร์ซเลน
พลาสติก กระดาษ และไม้ ดังนั้นอาหารในภาชนะโลหะจึงไม่สุก

อาหารที่เหมาะสมสำหรับการทำอาหารด้วยไมโครเวฟ:
อาหารที่เหมาะสมสำหรับการทำอาหารด้วยไมโครเวฟมีหลายชนิด
ได้แก่ผักสดหรือแช่แข็ง ผลไม้ เส้นพาสต้า ข้าว ธัญพืช ถั่ว ปลา และเนื้อ
นอกจากนี้ยังสามารถทำซอส คัสตาร์ด ซุป พุดดิ้งแบบนึ่ง อาหารหมักดอง
และผักผลไม้ดองได้ด้วยเตาอบไมโครเวฟ โดยรวมแล้ว
การทำอาหารด้วยเตาไมโครเวฟเหมาะที่สุดสำหรับอาหารทุกชนิดซึ่งปกติแล้ว
จะทำบนเตา เช่นการละลายเนยหรือซ็อกโกแลต (ดูบทที่มีเคล็ดลับ
เทคนิค และคำแนะนำ)

การปิดภาชนะขณะทำอาหาร

การปิดภาชนะอาหารในระหว่างการทำอาหารเป็นสิ่งที่สำคัญยิ่ง
เนื่องจากน้ำที่ระเหยจะกลายเป็นไอน้ำและกระจายไปในระหว่างขั้นตอนการทำอาหาร
ท่านสามารถปิดอาหารได้หลายแบบ: เช่นปิดด้วยจานเซรามิค ฝาปิดพลาสติก
หรือฟิล์มที่เหมาะสมสำหรับใช้กับเตาไมโครเวฟ

เวลาพัก

หลังจากทำอาหารเสร็จเรียบร้อยแล้ว
เวลาปล่อยพักก็เป็นสิ่งสำคัญเพื่อให้อุณหภูมิกระจายในอาหารได้ทั่วถึง

คำแนะนำในการทำอาหารสำหรับผักแช่แข็ง

ให้ใช้ขามแก้วไฟเร็กซ์ที่เหมาะสมพร้อมฝา ทำอาหารโดยปิดฝาไว้และใช้เวลาต่ำสุด
โปรดดูตาราง ให้ปรุงอาหารในเตาต่อไปจนได้ตามลักษณะที่ท่านต้องการ
คนสองครั้งในระหว่างการทำอาหารและหนึ่งครั้งหลังทำเสร็จแล้ว เติมน้ำเกลือ
เครื่องเทศ หรือเนย หลังจากทำอาหารเสร็จ ปิดฝาไว้ในระหว่างช่วงเวลาพัก

อาหาร	ปริมาณ	กำลังไฟ	เวลา (นาที)	เวลาพัก (นาที)	คำแนะนำ
ผักโขม	150ก.	600วัตต์	5-6	2-3	เติมน้ำเย็นลงไป 15 มล. (1 ช้อนโต๊ะ)
บร็อคโคลี่	300ก.	600วัตต์	8 1/2-9 1/2	2-3	เติมน้ำเย็นลงไป 15 มล. (1 ช้อนโต๊ะ)
ถั่วลันเตา	300ก.	600วัตต์	7 1/2-8 1/2	2-3	เติมน้ำเย็นลงไป 15 มล. (1 ช้อนโต๊ะ)
ถั่วเขียว	300ก.	600วัตต์	9-10	2-3	เติมน้ำเย็นลงไป 15 มล. (1 ช้อนโต๊ะ)
ผักรวม (แครอท/ ถั่วลันเตา/ ข้าวโพด)	300ก.	600วัตต์	7 1/2-8 1/2	2-3	เติมน้ำเย็นลงไป 15 มล. (1 ช้อนโต๊ะ)
ผักรวม (แบบจีน)	300ก.	600วัตต์	8-9	2-3	เติมน้ำเย็นลงไป 15 มล. (1 ช้อนโต๊ะ)

คำแนะนำในการทำอาหาร(ต่อ)

คำแนะนำในการทำอาหารสำหรับผักสด

ให้ใช้ขามแก้วไฟเร็กซ์ที่เหมาะสมพร้อมฝาเติมน้ำเย็น 30-45 มล. (2-3 ช้อนโต๊ะ) สำหรับผักทุก 250 ก. หากไม่มีการแนะนำปริมาณน้ำเป็นอย่างอื่น โปรดดูตาราง ทำอาหารโดยมีฝาปิดไว้โดยใช้เวลาต่ำสุด โปรดดูตาราง ให้ปรุงอาหารในเตาต่อไปเพื่อให้ได้ตามลักษณะที่ท่านต้องการ คนหนึ่งครั้งในระหว่างการทำอาหารและอีกหนึ่งครั้งหลังทำเสร็จแล้ว เติมเกลือ เครื่องเทศ หรือเนย หลังจากทำอาหารเสร็จ ปิดฝาไว้ในระหว่างช่วงเวลาพัก 3 นาที คำแนะนำ: หั่นผักสดให้เป็นชิ้นขนาดเท่ากัน หากหั่นชิ้นเล็กจะยิ่งทำให้สุกเร็วขึ้น

ผักสดทั้งหมดควรทำให้สุกโดยใช้กำลังไฟสูงสุดของไมโครเวฟ (850 วัตต์)

อาหาร	ปริมาณ	เวลา (นาที)	เวลาพัก (นาที)	คำแนะนำ
บร็อคโคลี	250ก. 500ก.	4-4½ 7½-8	3	เตรียมข้อขนาดเท่าๆกัน จัดให้ก้านอยู่ตรงกลาง
กะหล่ำปลี	250ก.	5½-6½	3	เติมน้ำ 60-75 มล. (5-6 ช้อนโต๊ะ)
แครอท	250ก.	4½-5	3	หั่นแครอทให้เป็นแว่นเท่าๆกัน
ดอกกะหล่ำ	250ก. 500ก.	5-5½ 8½-9	3	เตรียมข้อขนาดเท่าๆกัน สำหรับข้อที่มีขนาดใหญ่ให้หั่นครึ่ง จัดให้ก้านอยู่ตรงกลาง
ซูกินี	250ก.	3½-4	3	หั่นซูกินีเป็นแว่นเติมน้ำ 30 มล. (2 ช้อนโต๊ะ) หรือเนยก่อนเล็กน้อยหนึ่งก่อน ทำให้สุกจนกว่าจะนุ่ม
มะเขือ	250ก.	3½-4	3	หั่นมะเขือเป็นแว่นและเสิร์ฟ และพรมด้วยน้ำมันาว 1 ช้อนโต๊ะ
ต้นกระเทียม	250ก.	4½-5	3	หั่นต้นกระเทียมเป็นแว่นหนาๆ
เห็ด	125ก. 250ก.	1½-2 3-3½	3	เตรียมเห็ดดอกเล็กๆทั้งดอกหรือหั่นเป็นแว่น ไม่ต้องเติมน้ำ พรมด้วยน้ำมันาว ปรุงรสด้วยเกลือและพริกไทย เทน้ำออกก่อนเสิร์ฟ
หัวหอม	250ก.	5½-6	3	หั่นหัวหอมเป็นแว่นหรือหั่นครึ่งเติมน้ำ 15 มล. (1 ช้อนโต๊ะ)
พริกไทย	250ก.	4½-5	3	หั่นพริกไทยเป็นชิ้นเล็กๆ
มันฝรั่ง	250ก. 500ก.	4-5 7½-8½	3	ซังน้ำหนกมันฝรั่งที่ปอกเปลือกแล้วและ หั่นเป็นครึ่งหรือสี่ส่วนโดยมีขนาดเท่าๆกัน
หัวผักกาด	250ก.	5-5½	3	หั่นหัวผักกาดเป็นสี่เหลี่ยมลูกบาศก์เล็กๆ

คำแนะนำในการทำอาหารข้าวและเส้นพาสต้า

ข้าว: ใช้ขามแก้วไฟเร็กซ์ขนาดใหญ่ที่เหมาะสมพร้อมฝา ข้าวจะมีปริมาณเพิ่มขึ้นเป็นสองเท่าในระหว่างการหุง ให้หุงข้าวโดยปิดฝาไว้ หลังจากหุงเสร็จแล้ว ให้คนก่อนเวลาพักและเติมเกลือหรือเครื่องเทศ และเนย
หมายเหตุ: ข้าวอาจจะดูดซึมน้ำไม่ได้หมดหลังจากหุงเสร็จ

เส้นพาสต้า: ใช้ขามแก้วไฟเร็กซ์ขนาดใหญ่ เติมน้ำต้ม เกลือเล็กน้อยและคนให้ดี ต้มโดยปิดฝาไว้ คนเป็นครั้งคราวในระหว่างต้มและหลังต้ม ปิดฝาไว้ในระหว่างเวลาพักและจากนั้นเทน้ำออกให้หมด

อาหาร	ปริมาณ	กำลังไฟ	เวลา (นาที)	เวลาพัก (นาที)	คำแนะนำ
ข้าวขาว (หุง)	250ก.	850วัตต์	16½-17½	5	เติมน้ำเย็นลงไป 500 มล.
ข้าวแดง (หุง)	250ก.	850วัตต์	21½-22½	5	เติมน้ำเย็นลงไป 500 มล.
ข้าวแดง	250ก.	600วัตต์	21½-22½	10	เติมน้ำเย็นลงไป 600 มล.
ข้าวผสม (ข้าว + ข้าวอินเดียน)	250ก.	850วัตต์	17½-18½	5	เติมน้ำเย็นลงไป 500 มล.
ข้าวโพดผสม (ข้าว + ธัญพืช)	250ก.	850วัตต์	18½-19½	5	เติมน้ำเย็นลงไป 400 มล.
พาสต้า	250ก.	850วัตต์	11-12	5	เติมน้ำร้อนลงไป 1000 มล.

คำแนะนำในการทำอาหาร(ต่อ)

การอุ่น

เตาอบไมโครเวฟของท่านจะประหยัดเวลาได้มากกว่าใช้เตาอบธรรมดา ตั้งระดับความร้อนและระยะเวลาในการทำงานตามตารางในหน้าถัดไป เวลาในการทำงานถูกจัดให้สัมพันธ์กับอุณหภูมิห้องประมาณ +18 ถึง +20 องศา สำหรับอาหารที่เป็นของเหลวและ +5 ถึง +7 องศา สำหรับอาหารแช่เย็น

การจัดวางและการปิดครอบอาหาร

หลีกเลี่ยงการอุ่นอาหารชิ้นใหญ่ เช่น ขั้วต่อของเนื้อติดกระดูก ซึ่งภายนอกจะสุกเกินไปและแห้งก่อนส่วนกลางจะร้อนเต็มที่ การอุ่นอาหารชิ้นเล็กๆ จะได้ผลดีกว่า

ระดับความร้อนและการคนอาหาร

อาหารบางชนิดสามารถอุ่นได้โดยใช้ความร้อน 850 วัตต์ ในขณะที่อาหารชนิดอื่นควรจะอุ่นโดยใช้ความร้อน 600 วัตต์ 450 วัตต์ หรือกระทั่ง 300 วัตต์ โปรดดูตารางเพื่อดูคำแนะนำ โดยทั่วไปแล้วควรจะอุ่นอาหารโดยใช้ความร้อนระดับต่ำลง หากอาหารมีลักษณะอ่อนนุ่ม มีปริมาณมากๆ หรือเมื่ออุ่นแล้วเกิดความร้อนขึ้นได้อย่างรวดเร็ว (มินซ์พาย เป็นต้น)

คนอาหารให้ดีหรือพลิกกลับอาหารในระหว่างการอุ่นเพื่อให้ได้ผลดีที่สุด เมื่อเป็นไปได้ให้คนอาหารอีกครั้งก่อนเสิร์ฟ

โปรดระมัดระวังเมื่ออุ่นอาหารที่เป็นของเหลวและอาหารทารก เพื่อป้องกันความร้อนปะทุขึ้นและอาจถูกลวกได้ ให้คนก่อน ระหว่าง และหลังการอุ่น ทั้งอาหารไว้ในเตาไมโครเวฟก่อนในระหว่างเวลารอพัก ขอแนะนำให้ใส่ซองพลาสติกหรือแท่งแก้วไว้ในอาหารที่เป็นของเหลว ควรหลีกเลี่ยงการทำให้อาหารร้อนเกินไป (ซึ่งจะทำให้อาหารเสีย) ควรใช้เวลาอุ่นให้น้อยไว้แล้วจึงเพิ่มเวลาอุ่น หากจำเป็น

การอุ่นและเวลาพัก

เมื่ออุ่นอาหารเป็นครั้งแรก ควรจะจดเวลาที่ใช้ไว้เพื่อใช้อ้างอิงในครั้งต่อไป

โปรดดูให้แน่ใจว่าอาหารที่อุ่นนั้นร้อนมากอย่างทั่วถึง

ปล่อยอาหารพักไว้ครู่หนึ่งหลังจากอุ่น เพื่อให้อุณหภูมิกระจายออกทั่ว

แนะนำให้พักทิ้งไว้ประมาณ 2-4 นาที นอกจากมีการแนะนำเป็นอย่างอื่นในตารางนี้

โปรดระมัดระวังเมื่ออุ่นอาหารที่เป็นของเหลวและอาหารทารก นอกจากนี้โปรดดูหัวข้อ ข้อควรระวังด้านความปลอดภัย

การอุ่นอาหารที่เป็นของเหลว

- ปล่อยอาหารพักไว้อย่างน้อย 20 วินาทีหลังจากเสร็จสิ้นการอบ
- เพื่อให้อุณหภูมิกระจายออกทั่ว คนอาหารในระหว่างการอุ่น หากจำเป็น และคนหลังจากการอุ่นเสมอ เพื่อป้องกันความร้อนปะทุขึ้นและอาจเกิดการลวกได้ ทานควรใส่ซองหรือแท่งแก้วไว้ในเครื่องต้มและคนก่อน ระหว่าง และหลังการอุ่น

การอุ่นอาหารทารก

อาหารทารก:

- เทลงในจาน เซรามิกกันลื่น ใช้ผ้าพลาสติกปิดไว้ คนให้ทั่วหลังอุ่น ปล่อยพักไว้ 2-3 นาที ก่อนเสิร์ฟ คนอีกครั้งและตรวจสอบอุณหภูมิ อุณหภูมิการเสิร์ฟที่แนะนำคือ: ระหว่าง 30-40 องศาเซลเซียส

นมสำหรับทารก:

- รินนมลงในขวดแก้วปลอดเชื้อ อุ่นโดยไม่ปิดฝา ห้ามอุ่นขวดนมทารกโดยมีอุณหภูมิ เนื่องจากขวดอาจจะเปิดได้หากอุ่นร้อนเกินไป
- เขย่าให้เข้ากันก่อนปล่อยพักและเขย่าอีกครั้งก่อนให้เด็กดื่ม
- ตรวจสอบอุณหภูมินมหรืออาหารสำหรับทารกให้ดีทุกครั้งก่อนให้เด็กรับประทาน
- อุณหภูมิการเสิร์ฟที่แนะนำคือ: 37 องศาเซลเซียส

หมายเหตุ:

- อาหารทารกจำเป็นจะต้องตรวจสอบให้ดีก่อนให้เด็กรับประทานเพื่อป้องกันการลวก ใช้ระดับความร้อนและเวลาตามตารางต่อไปเป็นแนวทางในการอุ่นอาหาร

คำแนะนำในการทำอาหาร(ต่อ)

TA การอุ่นอาหารและนมสำหรับทารก

ใช้ระดับความร้อนและเวลาตามตารางนี้เป็นแนวทางในการอุ่นอาหาร

อาหาร	ปริมาณ	กำลังไฟ	เวลา	เวลาพัก (นาที)	คำแนะนำ
อาหารทารก (ผัก + เนื้อ)	190ก.	600วัตต์	20-30 วินาที	2-3	เทอาหารลงในจาน เซรามิคกันลื่นอุ่นโดยปิดฝาไว้ คนหลังจากอุ่น ปล่อยพักไว้ 2-3 นาที ก่อนเสิร์ฟ คนให้เข้ากันและ ตรวจสอบอุณหภูมิให้ดี
ข้าวโอ๊ต สำหรับทารก (ธัญพืช + นม + ผลไม้)	190ก.	600วัตต์	10-20 วินาที	2-3	เทอาหารลงในจาน เซรามิคกันลื่นอุ่นโดยปิดฝาไว้ คนหลังจากอุ่น ปล่อยพักไว้ 2-3 นาที ก่อนเสิร์ฟ คนให้เข้ากันและ ตรวจสอบอุณหภูมิให้ดี
นมสำหรับ ทารก	100มล. 200มล.	300วัตต์	30-40 วินาที 50วินาที - 1 นาที	2-3	คนหรือเขย่าให้เข้ากัน แล้วเทลงในขวดแก้วปลอดเชื้อ วางไว้ที่กึ่งกลางของจานหมุน อุ่นโดยเปิดฝาไว้ เขย่าให้เข้ากัน และปล่อยพักไว้อย่างน้อย 2 นาที ก่อนเสิร์ฟ คนให้เข้ากันและ ตรวจสอบอุณหภูมิให้ดี

การอุ่นอาหารและอาหารที่เป็นของเหลว

ใช้ระดับความร้อนและเวลาตามตารางนี้เป็นแนวทางในการอุ่น

อาหาร	ปริมาณ	กำลังไฟ	เวลา (นาที)	เวลาพัก (นาที)	คำแนะนำ
เครื่องดื่ม (กาแฟชา น้ำที่อุณหภูมิห้อง)	150 มล. (1 ถ้วย) 250 มล. (1 แก้ว)	850วัตต์	1-1½ 1½-2	1-2	รินลงในภาชนะเซรามิคและอุ่นโดยไม่ปิดฝาวางถ้วย (150 มล.) หรือแก้ว (250 มล.) ไว้ที่จุดกึ่งกลางของจานหมุน คนให้เข้ากันก่อนและหลัง เวลาพัก
ซूप (แช่เย็น)	250ก. 450ก.	850วัตต์	2½-3 3½-4	2-3	เทลงในจานเซรามิคกันลื่น ใช้ฝาพลาสติกปิดไว้ คนให้เข้ากันก่อนอุ่น คนอีกครั้งก่อนเสิร์ฟ
สตว์ (แช่เย็น)	350ก.	600วัตต์	5½-6½	2-3	ใส่สตว์ลงในจานเซรามิคกันลื่น ใช้ฝาพลาสติกปิดไว้ คนเป็นบางครั้งในระหว่างการอุ่น และคนอีกครั้งก่อน ปล่อยพักและเสิร์ฟ
เส้นพาสต้าที่มีซอส (แช่เย็น)	350ก.	600วัตต์	4½-5½	3	ใส่เส้นพาสต้า (เช่นสปาเก็ตตี้ หรือเส้นหมี่) ลงในจานเซรามิคแบบแบน ใช้ฟิล์มสำหรับไมโครเวฟ ปิดไว้ คนให้ตีก่อนเสิร์ฟ
พาสต้าแบบมีไส้ที่มีซอส (แช่เย็น)	350ก.	600วัตต์	5-6	3	ใส่พาสต้าแบบมีไส้ (เช่นราวิโอลี หรือทอร์เทลลินี) ลงในจานเซรามิคกันลื่น ใช้ฝาพลาสติกปิดไว้ คนเป็นบางครั้งในระหว่างการอุ่นและคนอีกครั้งก่อน ปล่อยพักและเสิร์ฟ
อาหารจานหลัก (แช่เย็น)	350ก. 450ก.	600วัตต์	5½-6½ 6½-7½	3	วางอาหารแช่เย็น 2-3 อย่างไว้บนจานเซรามิค ใช้ฟิล์มสำหรับไมโครเวฟปิดไว้

คำแนะนำในการทำอาหาร(ต่อ)

การละลายน้ำแข็งด้วยตนเอง (MANUAL DEFROSTING) (เฉพาะรุ่น M1817N เท่านั้น)

เตาไมโครเวฟสามารถละลายอาหารแช่แข็งได้อย่างมีประสิทธิภาพโดยจะค่อยๆ ละลาย น้ำแข็งที่ละลายด้วยเวลาอันสั้น ซึ่งเป็นข้อดีอย่างมากหากมีแขก ที่ไม่ได้นัดหมาย มาโดยกะทันหัน

เนื้อสัตว์ปีกแช่แข็งจะต้องละลายทั่วถึงก่อนนำไปทำอาหาร
ให้นำโลหะที่ผูกออกและนำเนื้อสัตว์ปีกออกจากห่อเพื่อให้หน้าที่ละลายไหลออกได้

วางอาหารแช่แข็งไว้บนจานโดยไม่ต้งปิด พลิกลงเมื่อละลายไปได้ครึ่งหนึ่ง
เทน้ำที่ละลายออกและนำเครื่องในออกให้เร็วที่สุด
ตรวจสอบอาหารเป็นบางครั้งเพื่อให้แน่ใจว่าอาหารยังไม่อุ่น
หากอาหารส่วนที่เล็กและบางจะเริ่มอุ่นขึ้น ท่านสามารถไขอลูมิเนียมฟอยล์แถบเล็กๆ
ห่อป้องกันไว้ในระหว่างการละลายน้ำแข็ง

หากผิวด้านนอกของเนื้อสัตว์ปีกเริ่มอุ่นขึ้นให้หยุดการละลายน้ำแข็งและปล่อยให้พักไว้
20 นาทีก่อนดำเนินการต่อไป
ปล่อยให้ปลา เนื้อวัว และเนื้อสัตว์ปีกพักไว้ก่อนเพื่อละลายน้ำแข็งให้เสร็จ
เวลาปล่อยให้พักสำหรับการละลายน้ำแข็งให้เสร็จจะแตกต่างกันไป
ทั้งนี้ขึ้นอยู่กับปริมาณที่ละลายน้ำแข็ง โปรดดูตารางด้านล่างนี้

คำแนะนำ: อาหารที่มีลักษณะแบนจะละลายน้ำแข็งได้ดีกว่าอาหารชิ้นที่หนา
และอาหารปริมาณน้อยๆ จะใช้เวลาน้อยกว่าอาหารปริมาณมาก

สำหรับการละลายอาหารแช่แข็งที่มีอุณหภูมิประมาณ -18 ถึง -20 องศาเซลเซียส
ให้ใช้ตารางต่อไปนี้เป็นแนวทาง

ควรละลายอาหารแช่แข็งโดยใช้ระดับความร้อน(180 วัตต์, ๙๙)

อาหาร	ปริมาณ	เวลา (นาที)	เวลาพัก (นาที)	คำแนะนำ
เนื้อ				
เนื้อวัวสับ	250ก. 500ก.	5½-6½ 13-14	10-20	วางเนื้อไว้บนจานเซรามิคแบน ห่อขอบบางๆ ไว้ด้วยอลูมิเนียมฟอยล์ กลับ ด้านเมื่อผ่านครึ่งเวลาการทำงาน แรก
สเต็กหมู	250ก.	6½-7½		

อาหาร	ปริมาณ	เวลา (นาที)	เวลาพัก (นาที)	คำแนะนำ
เนื้อสัตว์ปีก				
ไก่ชิ้น	500ก. (2 ชิ้น)	13½- 14½	15-40	ชั้นแรก ให้วางไก่ชิ้นโดยคว่ำด้าน ที่เป็นหนังลงก่อน สำหรับไก่ทั้ง ตัวให้วางส่วนอกลงก่อน วางบนจานเซรามิคแบน ห่อส่วนที่บางๆ เช่นปีก และ ปลายต่างๆ ไว้ด้วยอลูมิเนียมฟอยล์ กลับด้านเมื่อผ่านครึ่งเวลา การทำงานแรก
ไก่ทั้งตัว	950ก.	26-28		
ปลา				
แผ่นเนื้อปลา	200ก. (2ชิ้น) 400ก. (4ชิ้น)	6-7 12-13	5-20	วางปลาแช่แข็งไว้ที่กึ่งกลาง ของจานเซรามิ์แบน จัดส่วนที่บางไว้ได้ส่วนที่หนา ห่อส่วนท้ายไว้ด้วยอลูมิเนียม ฟอยล์ กลับด้านเมื่อผ่านครึ่งเวลา การทำงานแรก
ผลไม้				
ผลเบอร์รี่	250ก.	5½-6½	5-10	จัดเรียงผลไม้ไว้บน จาน ตันกลม (ขนาดใหญ่)
ขนมปัง				
ขนมปังแถว (แต่ละชั้นหนัก 50 ก.)	2ชั้น 4ชั้น	1½-2 3-3½	5-10	จัดวางขนมปังแถวไว้เป็น วงกลมหรือวางแผ่นขนม ปังไว้ตามแนวอนบนกระดาดขั้บ กลับด้านเมื่อผ่านครึ่งเวลา การทำงานแรก
ขนมปังปัง/ แซนวิช	250ก. 500ก.	4-4½ 9-11		
ขนมปังเยอรมัน (ข้าวสาลี + แป้งข้าวไรย์)				

TA

คำแนะนำในการทำอาหาร(ต่อ)

เคล็ดลับพิเศษ

การละลายเนย

ใส่เนย 50 ก. ไว้ในจานแก้วกันลิกขนาดเล็ก ใช้ผ้าพลาสติกปิดไว้อุ่น 30-40 วินาที โดยใช้ไฟ 850 วัตต์ จนกว่าเนยจะละลาย

การละลายช็อกโกแลต

ใส่ช็อกโกแลต 100 ก. ไว้ในจานแก้วกันลิกขนาดเล็ก อุณหภูมิ 3-5 นาที โดยใช้ไฟ 450 วัตต์ จนกว่าช็อกโกแลตจะละลาย คนหนึ่งครั้งหรือสองครั้งในระหว่างการละลาย ใช้ถุงมือจับเมื่อนำออกมา

การละลายวุ้น

ใส่วุ้น 20 กรัมในจานแก้วกันลิกขนาดเล็ก อุณหภูมิ 20-30 วินาที โดยใช้ไฟ 300 วัตต์ จนกว่าวุ้นจะละลาย

การละลายน้ำผึ้งที่ตกผลึก

ใส่แผ่นเจลาตินแห้ง (10 ก.) ในน้ำเย็น 5 นาที จากนั้นนำใส่ชามแก้วไฟเร็กซ์ขนาดเล็ก อุณหภูมิ 1 นาที โดยใช้ไฟ 300 วัตต์ คนหลังจากที่ละลาย

การทำน้ำเชื่อม/ไอซิ่ง (สำหรับเค้กและกาโต)

ผสมน้ำเชื่อมสำเร็จ (ประมาณ 14 ก.) โดยใช้น้ำตาล 40 ก. และน้ำเย็น 250 มล. ทำในชามแก้วไฟเร็กซ์โดยไม่ปิดฝา 3 1/2 ถึง 4 1/2 นาที โดยใช้ไฟ 850 วัตต์ จนกว่าน้ำเชื่อม/ไอซิ่ง จะใส คนสองครั้งในระหว่างการทำ

การทำแฮม

ใส่ผลไม้ 600 ก. (เช่น เบอร์รี่หลายชนิด) ลงในชามแก้วไฟเร็กซ์ขนาดเหมาะสม โดยมีฝาปิด เติมน้ำตาลเพื่อถนอมอาหาร 300 ก. และคนให้เข้ากัน ทำให้สุกโดยปิดฝาไว้ 10-12 นาที โดยใช้ไฟ 850 วัตต์ คนหลายๆ ครั้งในระหว่างการทำ เทลงในขวดโหลแก้ว ปิดเปิดฝาไว้ 5 นาที

การทำพุดดิ้ง

ผสมแบ่งพุดดิ้งกับน้ำตาลและนม 500 มล. ตามคำแนะนำของผู้ผลิตและคนให้เข้ากัน ใช้ชามแก้วไฟเร็กซ์ขนาดเหมาะสม โดยมีฝาปิด ทำให้สุกโดยปิดฝาไว้ 6 1/2 ถึง 7 1/2 นาที โดยใช้ไฟ 850 วัตต์ คนหลายๆ ครั้งในระหว่างการทำ

อัลมอนต์คั่วฝาน

วางอัลมอนต์ 30 ก. กระจายให้ทั่วบนจานเซรามิคขนาดกลาง คนหลายๆ ครั้งในระหว่างการคั่ว 3 1/2 - 4 1/2 นาที โดยใช้ไฟ 600 วัตต์ พลั่วพลิกไว้ในเตาอบ 2-3 นาที ใช้ถุงมือจับเมื่อนำออกมา

การทำความสะอาดเตาอบไมโครเวฟ

ควรทำความสะอาดส่วนต่างๆ ของเตาไมโครเวฟต่อไปนี้เป็นประจำ เพื่อป้องกันการสะสมของคราบไขมันและเศษอาหาร:

- พื้นผิวภายในและภายนอก
- ประตูและสลักประตู
- จานหมุนและวงแหวนรองจานหมุน



ควรมั่นใจว่าผิวขอบประตูสะอาดอยู่เสมอและปิดประตูอย่างถูกต้อง และควรปิดเครื่องก่อนทำความสะอาดทุกครั้ง



หากไม่สามารถรักษาเตาอบให้สะอาดอยู่เสมอได้ อาจทำให้พื้นผิวของเตาอบเสื่อม ซึ่งจะให้เตาอบไม่อยู่ในสภาพการใช้งานที่สมบูรณ์หรืออาจเกิดอันตรายร้ายแรงขึ้นได้

1. ทำความสะอาดผิวด้านนอกด้วยผ้านุ่มและน้ำสบู่อุ่นๆ จากนั้นเช็ดออกให้แห้ง
2. เช็ดรอยกระเด็นหรือคราบไขมันที่ผิวด้านในหรือที่แกนหมุนออก ด้วยผ้าชุบน้ำสบู่ จากนั้นเช็ดออกให้แห้ง
3. เมื่อต้องการทำความสะอาดเศษอาหารที่ติดอยู่ให้ออกโดยง่าย หรือกำจัดกลิ่นให้วางมะนาวเจือจางหนึ่งถ้วยไว้บนจานหมุนและทำให้ร่อนลิบนาที่ด้วยระดับความร้อนสูงสุด
4. จานหมุนแก้วสามารถใช้กับเครื่องล้างจานได้



ห้ามทำให้น้ำกระเด็นถูกช่องอากาศ ห้ามใช้ผลิตภัณฑ์ที่กัดกร่อนหรือสารเคมีทำละลาย โปรดระมัดระวังเป็นพิเศษเมื่อทำความสะอาดสลักประตู เพื่อให้แน่ใจว่าจะไม่มีเศษอาหารที่:

- สะสมอยู่
- ทำให้ประตูปิดได้ไม่สนิท

การเก็บรักษาและซ่อมบำรุงเตาอบไมโครเวฟ

ควรศึกษาข้อควรระวังเพื่อเป็นแนวทางในการเก็บรักษาและซ่อมบำรุง

ห้ามใช้เตาอบหากประตูหรือสลักประตูเสียหายดังนี้:

- บานพับหัก
- สลักเสื่อมสภาพ
- ตัวเครื่องบวมหรือเสียหาย

ควรใช้ช่างผู้ชำนาญด้านเตาอบไมโครเวฟเท่านั้นเป็นผู้ดำเนินการซ่อมแซม

- ☛ **ห้าม** ถอดฝาครอบด้านนอกออกจากเตาอบ หากเตาอบเกิดข้อบกพร่องและจำเป็นต้องซ่อมหรือท่านไม่แน่ใจในสภาพของเตา:
 - ให้ถอดปลั๊กออกจากเตาเสียทันที
 - ติดต่อศูนย์บริการหลังการขายที่ใกล้ที่สุด
- ☒ หากท่านต้องการจัดเก็บเตาอบไว้ที่อื่นชั่วคราว ให้เลือกสถานที่ที่แห้งและไม่มีฝุ่น
 - **สาเหตุ:** ฝุ่นและความชื้นอาจทำให้เกิดผลเสียกับชิ้นส่วนการทำงานในเตาอบ
- ☒ เตาอบไมโครเวฟนี้ถูกออกแบบเพื่อการใช้งานในบ้าน

ลักษณะจำเพาะทางเทคนิค

SAMSUNG มุ่งมั่นที่จะพัฒนาผลิตภัณฑ์อยู่เสมอ
ทั้งรายละเอียดจำเพาะในการออกแบบและคำแนะนำสำหรับ
ผู้ใช้เหล่านี้สามารถเปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบ

รุ่น	M1827N / M1817N
แหล่งจ่ายไฟ	220 โวลต์ ~ 50 Hz
การใช้ไฟ ไมโครเวฟ	1250 วัตต์
กำลังไฟที่กระจายออก	100 วัตต์ / 850 วัตต์ (IEC-705)
คลื่นความถี่ในการทำงาน	2450 MHz
แม่กึ่งไดรอน	OM75P(31)
วิธีระบายความร้อน	มอเตอร์พัดลมระบายความร้อน
ขนาด (กว้าง X สูง X ลึก) ภายนอก ภายในเตาอบ	489 x 275 x 397 มม. 330 x 211 x 329 มม.
ปริมาตร	23 ลิตร
น้ำหนักสุทธิ สุทธิ	ประมาณ 13.5 กก.

TA

TA

.....

•

•

•




SAMSUNG

MICROWAVE OVEN

Owner's Instructions and Cooking Guide

M1827N / M1817N

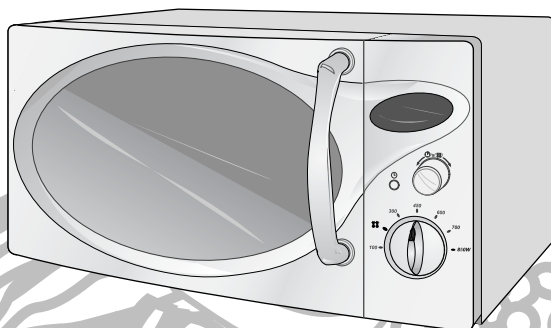


Quick Look-up Guide	2
Oven.....	3
Accessories	3
Control Panel.....	4
Using this Instruction Booklet.....	5
Safety Precautions	5
Installing Your Microwave oven	7
Setting the Time(M1827N)	7
How a Microwave Oven Works	8
Checking that Your Oven is Operating Correctly	8
What to Do if You are in Doubt or Have a Problem	9
Cooking / Reheating.....	9
Power Levels.....	10
Stopping the Cooking.....	10
Adjusting the Cooking Time	11
Manual Defrosting of Food(M1817N).....	11
Using the Auto Defrosting Feature(M1827N).....	12
Auto Defrost Settings(M1827N)	12
Using the Instant Reheat Feature(M1817N)	12
Instant Reheat Settings(M1817N).....	12
Cookware Guide	13
Cooking Guide	14
Cleaning Your Microwave Oven	19
Storing and Repairing Your Microwave Oven.....	20
Technical Specifications.....	20

Quick Look-up Guide


GB

Model : M1827N

 If you want to cook some food




 1. Place the food in the oven.
Select the power level by rotating the **COOKING POWER CONTROL** knob.




2. Select the cooking time by rotating the **Time/Weight** (⌚/g(⚖️)) dial.
Result : Cooking starts after about two seconds.

 If you want to auto defrost some food




 1. Turn the **COOKING POWER CONTROL** knob to the **Auto Defrost** (⚡) symbol.



2. Turn the **Time/Weight** (⌚/g(⚖️)) dial to select the appropriate weight.
Result : Cooking starts after about two seconds.

 
If you want to adjust the cooking time




- Leave the food in the oven.
Turn the **Time/Weight** (⌚/g(⚖️)) dial to the desired time.

Model : M1817N

If you want to cook some food

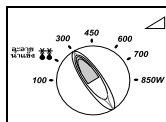


 1. Place the food in the oven.
Select the power level by rotating the **COOKING POWER CONTROL** knob.




2. Select the cooking time by rotating the **TIMER** knob.

 If you want to defrost some food




 1. Turn the **COOKING POWER CONTROL** knob to the **Manual Defrost** (⚡) symbol.



2. Turn the **TIMER** knob to select the appropriate time.

 
If you want to adjust the cooking time




1. Leave the food in the oven.
Turn the **TIMER** knob to desired time.

Oven

Model : M1827N

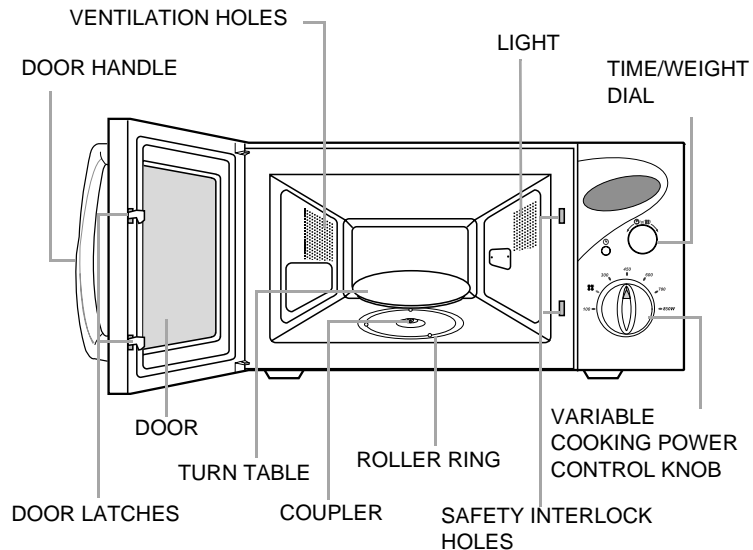


Model : M1817N

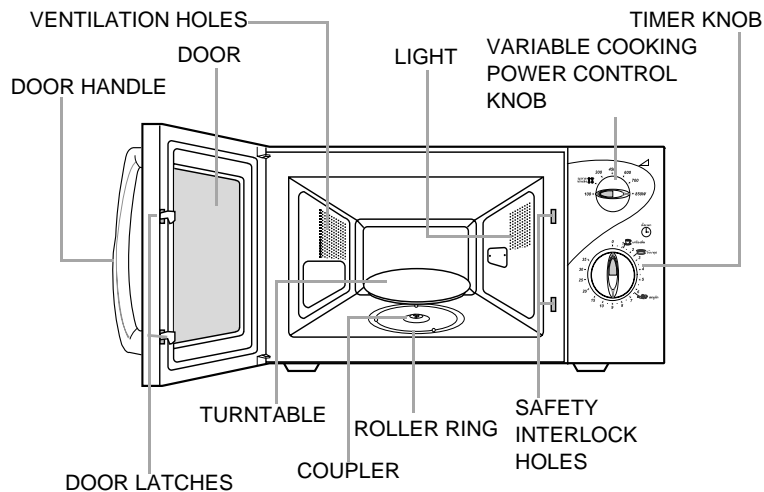

Accessories


Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

 GB




1. **Coupler**, already placed over the motor shaft in the base of the oven.

 Purpose: The coupler rotates the turntable.



2. **Roller ring**, to be placed in the centre of the oven.

 Purpose: The roller ring supports the turntable.



3. **Turntable**, to be placed on the roller ring with the centre fitting to the coupler.

Purpose: The turntable serves as the main cooking surface; it can be easily removed for cleaning.




DO NOT operate the microwave oven without the roller ring and turntable.

Control Panel


GB

Model :M1827N

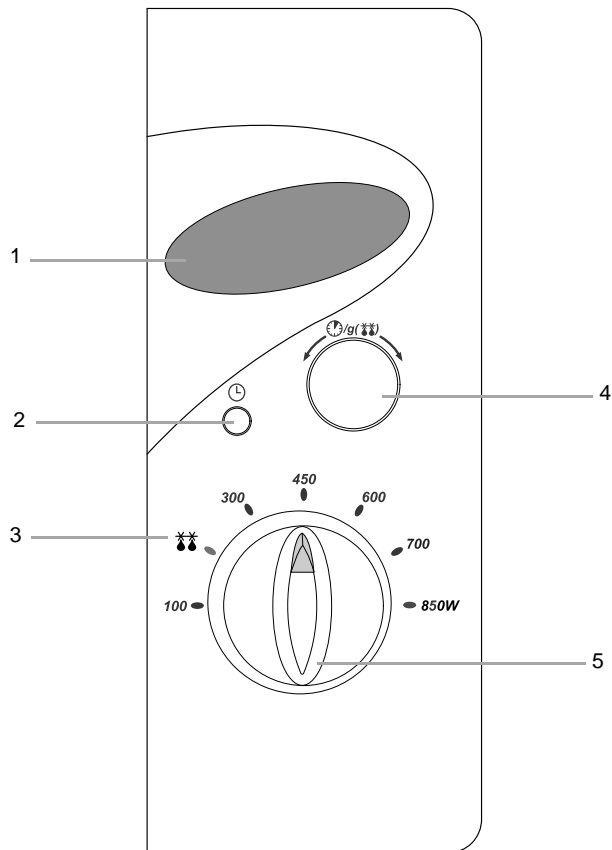

1. DISPLAY
2. CLOCK SETTING BUTTON
3. AUTO DEFROST
4. TIME/WEIGHT DIAL
5. VARIABLE COOKING POWER CONTROL KNOB

Model : M1817N

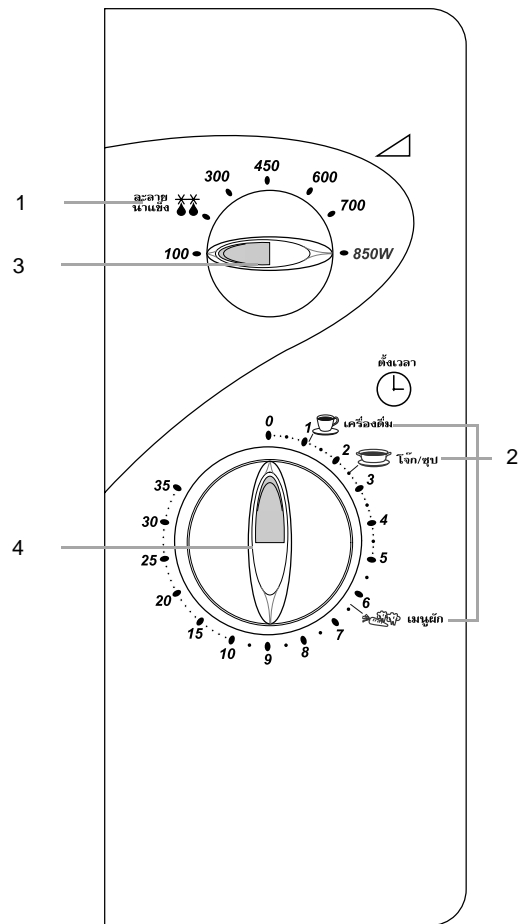

1. MANUAL DEFROST
2. INSTANT REHEAT
3. VARIABLE COOKING POWER CONTROL KNOB
4. TIMER KNOB

Using this Instruction Booklet

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain much valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips

Inside the cover you will find a quick look-up guide explaining three basic cooking operations:

- Cooking food
- Defrosting food
- Adding extra cooking time

At the front of the booklet you will find illustrations of the oven, and more importantly the control panel, so that you can find the buttons more easily.

The step-by-step procedures use three different symbols.



Importante



Nota



Turn

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- Do not place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.
- Do not operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:
 - (1) Door, door seals and sealing surfaces
 - (2) Door hinges (broken or loose)
 - (3) Power cable
- The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

Safety Precautions

IMPORTANT SAFETY INSTRUCTIONS.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Before cooking food or liquids in your microwave oven, please check that the following safety precautions are taken.

- DO NOT** use any metallic cookware in the microwave oven:
 - Metallic containers
 - Dinnerware with gold or silver trimmings
 - Skewers, forks, etc.

Reason: Electric arcing or sparking may occur and may damage the oven.
- DO NOT** heat:
 - Airtight or vacuum-sealed bottles, jars, containers
Ex) Baby food jars
 - Airtight food.
Ex) Eggs, nuts in shells, tomatoes

Reason: The increase in pressure may cause them to explode.
Tip: Remove lids and pierce skins, bags, etc.
- DO NOT** operate the microwave oven when it is empty.

Reason: The oven walls may be damaged.
Tip: Leave a glass of water inside the oven at all times.
The water will absorb the microwaves if you accidentally set the oven going when it is empty.
- DO NOT** cover the rear ventilation slots with cloths or paper.

Reason: The cloths or paper may catch fire as hot air is evacuated from the oven.
- ALWAYS** use oven gloves when removing a dish from the oven.

Reason: Some dishes absorb microwaves and heat is always transferred from the food to the dish. The dishes are therefore hot.
- DO NOT** touch heating elements or interior oven walls.

Reason: These walls may be hot enough to burn even after cooking has finished, even though they do not appear to be so. Do not allow inflammable materials to come into contact with any interior area of the oven. Let the oven cool down first.

GB

Safety Precautions

GB

7. To reduce the risk of fire in the oven cavity:
 - Do not store flammable materials in the oven
 - Remove wire twist ties from paper or plastic bags
 - Do not use your microwave oven to dry newspapers
 - If smoke is observed, keep the oven door closed and switch off or disconnect the oven from the power supply
8. Take particular care when heating liquids and baby foods.
 - **ALWAYS** allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize.
 - Stir during heating, if necessary, and ALWAYS stir after heating.
 - Take care when handling the container after heating. You may burn yourself if the container is too hot.
 - A risk of delayed eruptive boiling exists.
 - To prevent delayed boiling and possible scalding, you should put a plastic spoon or glass stick into the beverages and stir before, during and after heating.

Reason: During the heating of liquids the boiling point can be delayed; this means that eruptive boiling can start after the container is removed from the oven. You may scald yourself.

 - In the event of scalding, follow these FIRST AID instructions:
 - * Immerse the scalded area in cold water for at least 10 minutes.
 - * Cover with a clean, dry dressing.
 - * Do not apply any creams, oils or lotions.
 - **NEVER** fill the container to the top and choose a container that is wider at the top than at the bottom to prevent the liquid from boiling over. Bottles with narrow necks may also explode if overheated.
 - **ALWAYS** check the temperature of baby food or milk before giving it to the baby.
 - **NEVER** heat a baby's bottle with the teat on, as the bottle may explode if overheated.
9. Be careful not to damage the power cable.
 - Do not immerse the power cable or plug in water and keep the power cable away from heated surfaces.
 - Do not operate this appliance if it has a damaged power cable or plug.
10. Stand at arm's length from the oven when opening the door.

Reason: The hot air or steam released may cause scalding.
11. Keep the inside of the oven clean.

Reason: Food particles or spattered oils stuck to oven walls or floor can cause paint damage and reduce the efficiency of the oven.

12. You may notice a "Clicking" sound during operation (especially when the oven is defrosting).

Reason: This sound is normal when the electrical power output is changing.
13. When the microwave oven is operating without any load, the power will be cut off automatically for safety. You can operate normally after letting it stand for over 30 minutes.

IMPORTANT SAFETY INSTRUCTIONS

- During cooking, you should look into the oven from time to time when food is being heated or cooked in disposable containers of plastic, paper or other combustible materials.

IMPORTANT

Young children should **NEVER** be allowed to use or play with the microwave oven. Nor should they be left unattended near the microwave oven when it is in use. Items of interest to children should not be stored or hidden just above the oven.

WARNING:

If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING:

It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.

WARNING:

 
 
Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING:

Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

Installing Your Microwave oven

Place the oven on a flat, level surface that strong that is enough to safely bear the weight of the oven.



1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.
2. Remove all packing materials inside the oven. Install the roller ring and turntable. Check that the turntable rotates freely.
3. This microwave oven has to be positioned so that plug is accessible.

⚡ **Never** block the air vents as the oven may overheat and automatically switch itself off. It will remain inoperable until it has cooled sufficiently.

⚡ For your personal safety, plug the cable into a 3-pin, 220 Volt, 50Hz, AC earthed socket. If the power cable of this appliance is damaged, it must be replaced by a special cable (I-SHENG SP022, KDK KKP4819D, EUROELECTRIC 3410, SAMIL SP-106B, MOONSUNG EP-48E, HIGH PROJECT H.P 3). Contact your local dealer to have it replaced. The power cable of ISRAEL is PENCON(ZD16A), S/AFRICA APEX LEADS SA16 and NIGERIA, GHANA, KENYA and U.A.E is PENCON(UD13A1).

⚡ **Do not** install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

 
Setting the Time(M1827N)

Your microwave oven has an inbuilt clock. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:


- **When you first install your microwave oven**
- **After a power failure**




Do not forget to reset the clock when you switch to and from summer or winter time.



 
1. **To display the time in the...Then press the ⌚ button...**
24-hour notation Once
12-hour notation Twice



 
2. Turn the **Time/Weight**(⌚/g/⏺) dial to set the hour.



 3. Press the ⌚ button.



 4. Turn the **Time/Weight**(⌚/g/⏺) dial to set the minute.



5. Press the ⌚ button.

How a Microwave Oven Works


GB

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without changing either the form or the colour.

You can use your microwave oven to:

- *Defrost*
- *Cook*
- *Reheat*

Cooking Principle

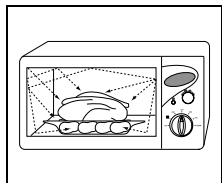

1. The microwaves generated by the magnetron are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.
2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.
3. Cooking times vary according to the recipient used and the properties of the food:
 - Quantity and density
 - Water content
 - Initial temperature (refrigerated or not)



As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:

 
- Even cooking of the food right to the centre
- The same temperature throughout the food

Checking that Your Oven is Operating Correctly


The following simple procedure enables you to check that your oven is work-ing correctly at all times.

First, place a bowl of water on the turntable. Then, close the door.

Model : M1827N




 1. Select the power level to maximum by turning the **COOKING POWER CONTROL** knob.




2. Select the time 4 to 5 minutes by turning the **Time/Weight** (⌚/g(⌚)) dial.
The water should then be boiling.
Result : Cooking starts after about two seconds.

 Model :M1817N



 1. Select the power level to maximum by turning **COOKING POWER CONTROL** knob.




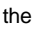
2. Select the time 4 to 5 minutes by turning the **TIMER** knob.
The water should then be boiling.



The oven must be plugged into an appropriate wall socket. The turntable must be in position in the oven. If a power level other than the maximum is used, the water takes longer to boil.

What to Do if You are in Doubt or Have a Problem

If you have any of the problems listed below try the solutions given.

 
- ◆ This is normal.
 - Condensation inside the oven
 - Air flow around the door and outer casing
 - Light reflection around the door and outer casing
 - Steam escaping from around the door or vents
 - ◆ The oven does not start when you turn the **Time/Weight**() dial.(M1827N)
 - Is the door completely closed?
 - ◆ The oven does not start when you turn the **TIMER** knob.(M1817N)
 - Is the door completely closed?
 - ◆ The food is not cooked at all
 - Have you set the timer correctly and/or turn the **Time/Weight**() dial.(M1827N)
 - Have you set the timer correctly?(M1817N)
 - Is the door closed?
 - Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?
 - ◆ The food is either overcooked or undercooked
 - Was the appropriate cooking length set for the type of food?
 - Was an appropriate power level chosen?
 - ◆ Sparking and cracking occur inside the oven (arcing)
 - Have you used a dish with metal trimmings?
 - Have you left a fork or other metal utensil inside the oven?
 - Is aluminium foil too close to the inside walls?
 - ◆ The oven causes interference with radios or televisions
 - Slight interference may be observed on televisions or radios when the oven is operating. This is normal.To solve this problem, install the oven away from televisions, radios and aerials.
 - If interference is detected by the oven's microprocessor, the display may be reset.To solve this problem, disconnect the power plug and reconnect it. Reset the time.(M1827N)
- ✉ If the above guidelines do not enable you to solve the problem, contact your local dealer or SAMSUNG after-sales service.

Cooking / Reheating


The following procedure explains how to cook or reheat food. **ALWAYS** check your cooking settings before leaving the oven unattended.


First, place the food in the centre of the turntable. Then, close the door.

Model : M1827N




 1. Select the power level to maximum by turning **COOKING POWER CONTROL** knob. **(MAXIMUM POWER : 850 W)**




2. Select the time by turning the **Time / Weight**() dial.
Result : The oven light comes on and the turntable starts rotating.
 - 1) Cooking starts and when it has finished the oven beeps four times.
 - 2) The end reminder signal will beep 3 times (once every minute).
 - 3) The current time is displayed again.

 Model : M1817N



 1. Select the power level to maximum by turning **COOKING POWER CONTROL** knob. **(MAXIMUM POWER: 850 W)**



2. Select the time by turning **TIMER** knob.
Result : The oven light comes on and the turntable starts rotating.



Never switch the microwave oven on when it is empty.



You can change the power level during cooking by turning the **COOKING POWER CONTROL** knob.

Power Levels

You can choose any of the power levels listed below.


Power Level	Output
HIGH	850 W
REHEAT	700 W
MEDIUM HIGH	600 W
MEDIUM	450 W
MEDIUM LOW	300 W
MANUAL DEFROST(☼☼) : M1817N	180 W
AUTO DEFROST(☼☼) : M1827N	180 W
LOW / KEEP WARM	100 W

- ☒ If you select higher power level, the cooking time must be decreased.
- ☒ If you select lower power level, the cooking time must be increased.


Stopping the Cooking

You can stop cooking at any time to check the food.

 Model : M1827N



 
- To stop temporarily;
Open the door.
Result : Cooking stops. To resume cooking, close the door.




- To stop Completely;
Turn the **Time / Weight**(☼/g(☼☼)) dial to the left.
“0” will be displayed.



 Model : M1817N



 
- To stop temporarily;
Open the door.
Result : Cooking stops. To resume cooking, close the door.



- To stop Completely;
Turn the **TIMER** knob to “0”.

Adjusting the Cooking Time

 
Model : M1827N



Adjust the remaining cooking time by rotating the **Time / Weight** (🕒/g(🍖)) dial.

Turn the dial right or left to increase the cooking time of your food during the cooking process.

 Model : M1817N




Adjust the remaining cooking time by rotating the **TIMER** knob.


Manual Defrosting of Food(M1817N)

GB

 The Manual Defrost feature enables you to defrost meat, poultry fish or fruit. First, place the frozen food in the centre of the turntable and close the door.



 1. Turn the **COOKING POWER CONTROL** knob to the **Manual Defrost**(🍖) symbol.



2. Turn the **TIMER** knob to select the appropriate time.
Result : Defrosting begins.



 
Use only recipients that are microwave-safe.




Select the Manual Defrosting function with a power level of 180W if you want to defrost food manually. For further details on manual defrosting and defrosting time, refer to the page 18 (M1817N only).

Using the Auto Defrosting Feature(M1827N)

The Auto Defrost feature enables you to defrost meat, poultry or fish.
First, place the frozen food in the centre of the turntable and close the door.



 1. Turn the **COOKING POWER CONTROL** knob to the **Auto Defrost** (☼☼) symbol.



2. Turn the **Timer/Weight** (☼/g/☼) dial select the appropriate weight.

Result :

The oven light comes on and the turntable starts rotating.

- 1) Cooking starts and when it has finished the oven beeps four times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.

☒ Use only recipients that are microwave-safe.

Auto Defrost Settings(M1827N)

Remove all kinds of packaging material before defrosting.

Place the frozen foods on a turntable.


Turn the food over when the oven beeps.

Keep the corresponding standing time after Auto Defrosting has finished.


Food	Portion	Standing Time	Recommendation
Meat	200-1500g	20-60 min	Shield the edges with aluminium foil.
Poultry	200-1500g	20-60 min	Turn the food over when the oven beeps.
Fish	200-1500g	20-50 min	

Using the Instant Reheat Feature(M1817N)

 First, place the food in the center of the turntable and close the door.



 1. Turn the **COOKING POWER CONTROL** knob to Max. Power.



2. Turn the **TIMER** knob to select Instant Reheat. (drinks or soup/sauce, fresh vegetables).



Use only recipients that are microwave-safe.

Instant Reheat Settings(M1817N)

Here are a few tips and recommendations to be followed when cooking or reheating food with the Instant Reheat and Cooking Feature.

Symbols	Food	Serving Size	Cooking Time	Standing Time
เครื่องดื่ม	Drinks	150 ml	1 min 5 sec	1 - 2 mins
ซุป/ซอส	Soup/Sauce (chilled)	200-250 ml	2 min 30 sec	2 - 3 mins
ผักสด	Fresh vegetables	300-350 g	6 min 20 sec	3 mins

Cookware Guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.

Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.

The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-Safe	Comments
Aluminium foil	✓ X	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Browning plate	✓	Do not preheat for more than eight minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	X	May catch fire.
• Recycled paper or metal trims	X	May cause arcing.
Glassware		
• Oven-to-table ware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.

Metal

- Dishes X May cause arcing or fire.
- Freezer bag twist ties X

Paper

- Plates, cups, napkins and Kitchen paper ✓ For short cooking times and warming. Also to absorb excess moisture.
- Recycled paper X May cause arcing.

Plastic

- Containers ✓ Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
- Cling film ✓ Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
- Freezer bags ✓ X Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.

Wax or grease-proof paper

- ✓ Can be used to retain moisture and prevent spattering.

Cooking Guide

GB

MICROWAVES

Microwave energy actually penetrates food, attracted and absorbed by its water, fat and sugar content.

The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

COOKING

Cookware for microwave cooking:

Cookware must allow microwave energy to pass through it for maximum efficiency. Microwaves are reflected by metal, such as stainless steel, aluminium and copper, but they can penetrate through ceramic, glass, porcelain and plastic as well as paper and wood. So food must never be cooked in metal containers.

Foods suitable for microwave cooking:

Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

Covering during cooking

To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process.

Food can be covered in different ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling film.

Standing times

After cooking is over food the standing time is important to allow the temperature to even out within the food.

Cooking Guide for frozen vegetables

Use a suitable glass pyrex bowl with lid. Cook covered for the minimum time - see table. Continue cooking to get the result you prefer.

Stir twice during cooking and once after cooking. Add salt, herbs or butter after cooking. Cover during standing time.

Food	Portion.	Power	Time (min.)	Standing Time (min.)	Instructions
Spinach	150g	600W	5-6	2-3	Add 15 ml (1 tablespoon) cold water.
Broccoli	300g	600W	8½-9½	2-3	Add 15 ml (1 tbsp.) cold water.
Peas	300g	600W	7½-8½	2-3	Add 15 ml (1 tbsp.) cold water.
Green Beans	300g	600W	9-10	2-3	Add 15 ml (1 tbsp.) cold water.
Mixed Vegetables (carrots/peas/corn)	300g	600W	7½-8½	2-3	Add 15 ml (1 tbsp.) cold water.
Mixed Vegetables (Chinese style)	300g	600W	8-9	2-3	Add 15 ml (1 tbsp.) cold water.

Cooking Guide(continued)

Cooking Guide for fresh vegetables

Use a suitable glass pyrex bowl with lid. Add 30-45 ml cold water (2-3 tbsp.) for every 250 g unless another water quantity is recommended - see table. Cook covered for the minimum time - see table. Continue cooking to get the result you prefer. Stir once during and once after cooking. Add salt, herbs or butter after cooking. Cover during a standing time of 3 minutes.

Hint: Cut the fresh vegetables into even sized pieces. The smaller they are cut, the quicker they will cook.

All fresh vegetables should be cooked using full microwave power (850 W).

Food	Portion	Time (min.)	Standing Time (min.)	Instructions
Broccoli	250g 500g	4-4½ 7½-8	3	Prepare even sized florets. Arrange the stems to the centre.
Brussels Sprouts	250g	5½-6½	3	Add 60-75 ml (5-6 tbsp.) water.
Carrots	250g	4½-5	3	Cut carrots into even sized slices.
Cauliflower	250g 500g	5-5½ 8½-9	3	Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre.
Courgettes	250g	3½-4	3	Cut courgettes into slices. Add 30 ml (2 tbsp.) water or a knob of butter. Cook until just tender.
Egg Plants	250g	3½-4	3	Cut egg plants into small slices and sprinkle with 1 tablespoon lemon juice.
Leeks	250g	4½-5	3	Cut leeks into thick slices.
Mushrooms	125g 250g	1½-2 3-3½	3	Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving.
Onions	250g	5½-6	3	Cut onions into slices or halves. Add only 15 ml (1 tbsp.) water.
Pepper	250g	4½-5	3	Cut pepper into small slices.
Potatoes	250g 500g	4-5 7½-8½	3	Weigh the peeled potatoes and cut them into similar sized halves or quarters.
Turnip Cabbage	250g	5-5½	3	Cut turnip cabbage into small cubes.

Cooking Guide for rice and pasta

Rice: Use a large glass pyrex bowl with lid - rice doubles in volume during cooking. Cook covered. After the cooking time is over, stir before standing time and salt or add herbs and butter. Remark: the rice may not have absorbed all water after the cooking time is finished.

Pasta: Use a large glass pyrex bowl. Add boiling water, a pinch of salt and stir well. Cook uncovered. Stir occasionally during and after cooking. Cover during standing time and drain thoroughly afterwards.

Food	Portion	Power	Time (min.)	Standing Time (min.)	Instructions
White Rice (parboiled)	250g	850W	16½-17½	5	Add 500 ml cold water.
Brown Rice (parboiled)	250g	850W	21½-22½	5	Add 500 ml cold water.
Brown Rice	250g	600W	21½-22½	10	Add 600 ml cold water.
Mixed Rice (rice + wild rice)	250g	850W	17½-18½	5	Add 500 ml cold water.
Mixed Corn (rice + grain)	250g	850W	18½-19½	5	Add 400 ml cold water.
Pasta	250g	850W	11-12	5	Add 1000 ml hot water.

REHEATING

Your microwave oven will reheat food in a fraction of the time that conventional ovens hobs normally take.
Use the power levels and reheating times in the following chart as a guide. The times in the chart consider liquids with a room temperature of about +18 to +20°C or a chilled food with a temperature of about +5 to +7°C.

Arranging and covering

Avoid reheating large items such as joint of meat - they tend to overcook and dry out before the centre is piping hot. Reheating small pieces will be more successful.

Power levels and stirring

Some foods can be reheated using 850 W power while others should be reheated using 600 W, 450 W or even 300 W.

Check the tables for guidance. In general, it is better to reheat food using a lower power level, if the food is delicate, in large quantities, or if it is likely to heat up very quickly (mince pies, for example).

Stir well or turn food over during reheating for best results. When possible, stir again before serving.

Take particular care when heating liquids and baby foods. To prevent eruptive boiling of liquids and possible scalding, stir before, during and after heating. Keep them in the microwave oven during standing time. We recommend putting a plastic spoon or glass stick into the liquids. Avoid overheating (and therefore spoiling) the food.

It is preferable to underestimate cooking time and add extra heating time, if necessary.

Heating and standing times

When reheating food for the first time, it is helpful to make a note of the time taken - for future reference.

Always make sure that the reheated food is piping hot throughout.

Allow food to stand for a short time after reheating - to let the temperature even out.

The recommended standing time after reheating is 2-4 minutes, unless another time is recommended in the chart..

Take particular care when heating liquids and baby food. See also the chapter with the safety precautions.

REHEATING LIQUIDS

Always allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to even out. Stir during heating, if necessary, and ALWAYS stir after heating. To prevent eruptive boiling and possible scalding, you should put a spoon or glass stick into the beverages and stir before, during and after heating.

REHEATING BABY FOOD

BABY FOOD:

Empty into a deep ceramic plate. Cover with plastic lid. Stir well after reheating! Let stand for 2-3 minutes before serving. Stir again and check the temperature. Recommended serving temperature: between 30-40°C.

BABY MILK:

Pour milk into a sterilised glass bottle. Reheat uncovered. Never heat a baby's bottle with teat on, as the bottle may explode if overheated. Shake well before standing time and again before serving ! Always carefully check the temperature of baby milk or food before giving it to the baby. Recommended serving temperature: ca. 37°C.

REMARK:

Baby food particularly needs to be checked carefully before serving to prevent burns.

Use the power levels and times in the next table as a guide lines for reheating.

Cooking Guide(continued)

Reheating Baby Food and Milk

Use the power levels and times in this table as guide lines for reheating.

Food	Portion.	Power	Time (min.)	Standing Time (min.)	Instructions
Baby food (vegetables + meat)	190g	600W	20-30 sec.	2-3	Empty into ceramic deep plate. Cook covered. Stir after cooking time. Stand for 2-3 minutes. Before serving, stir well and check the temperature carefully.
Baby porridge (grain + milk + fruit)	190g	600W	10-20 sec.	2-3	Empty into ceramic deep plate. Cook covered. Stir after cooking time. Stand for 2-3 minutes. Before serving, stir well and check the temperature carefully.
Baby milk	100ml 200ml	300W	30-40 sec. 50 sec-1min	2-3	Stir or shake well and pour into a sterilised glass bottle. Place into the centre of turn-table. Cook uncovered. Shake well and stand for at least 2 minutes. Before serving, shake well and check the temperature carefully.

Reheating Liquids and Food

Use the power levels and times in this table as guide lines for reheating.

Food	Portion.	Power	Time (min.)	Standing Time (min.)	Instructions
Drinks (coffee, tea, water with room temperature)	150 ml (1 cup) 250 ml (1 mug)	850W	1-1½ 1½-2	1-2	Pour into a ceramic cup and reheat uncovered. Place cup(150 ml) or mug(250 ml) in the centre of turntable. Stir carefully before and after standing time.
Soup (chilled)	250g 450g	850W	2½-3 3½-4	2-3	Pour into a deep ceramic plate. Cover with plastic lid. Stir well after reheating. Stir again before serving.
Stew (chilled)	350g	600W	5½-6½	2-3	Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving.
Pasta with sauce (chilled)	350g	600W	4½-5½	3	Put pasta (e.g. spaghetti or egg noodles) on a flat ceramic plate. Cover with microwave cling film. Stir before serving.
Filled pasta with sauce (chilled)	350g	600W	5-6	3	Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving.
Plated Meal (chilled)	350g 450g	600W	5½-6½ 6½-7½	3	Plate a meal of 2-3 chilled components on a ceramic dish. Cover with microwave cling-film.

Cooking Guide(continued)

GB

MANUAL DEFROSTING (M1817N only)

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time.

This can be of great advantage, if unexpected guests suddenly show up.

Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.

Put the frozen food on a dish without cover. Turn over half way, drain off any liquid and remove any giblets as soon as possible.

Check the food occasionally to make sure that it does not feel warm.

If smaller and thinner parts of the frozen food start to warm up, they can be shield by wrapping very small strips of aluminium foil around them during defrosting.

Should poultry start to warm up on the outer surface, stop thawing and allow it to stand for 20 minutes before continuing.

Leave the fish, meat and poultry to stand in order to complete defrosting. The standing time for complete defrosting will vary depending on the quantity defrosted. Please refer to the table below.

Hint: Flat food defrosts better than thick and smaller quantities need less time than bigger ones. Remember this hint while freezing and defrosting food.

For defrosting of frozen food with a temperature of about -18 to -20 °C, use the following table as a guide.

All frozen food should be defrosted using defrosting power level (180 W).

All frozen food should be defrosted using defrosting power level (180W, ).

Food	Portion	Time (min.)	Standing Time (min.)	Instructions
Meat				
Minced beef	250g 500g	5½-6½ 13-14	10-20	Place the meat on a flat ceramic plate. Shield thinner edges with aluminium foil. Turn over after half of defrosting time!
Pork steaks	250g	6½-7½		
Poultry				
Chicken pieces	500g (2 pcs)	13½-14½	15-40	First, put chicken pieces first skin-side down, whole chicken first breast-side-down on a flat ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time!
Whole chicken	950g	26-28		
Fish				
Fish fillets	200g (2 pcs) 400g (4 pcs)	6-7 12-13	5-20	Put frozen fish in the middle of a flat ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends with aluminium foil. Turn over after half of defrosting time!
Fruits				
Berries	250g	5½-6½	5 - 10	Distribute fruits on a flat, round glass dish (with a large diameter).
Bread				
Bread rolls (each ca. 50 g)	2 pcs 4 pcs	1½-2 3-3½	5 - 10	Arrange rolls in a circle or bread horizontally on kitchen paper in the middle of turntable. Turn over after half of defrosting time!
Toast/ Sandwich	250g	4-4½		
German bread (wheat+rye flour)	500g	9-11		

Cooking Guide(continued)

SPECIAL HINTS

MELTING BUTTER

Put 50 g butter into a small deep glass dish. Cover with plastic lid.
Heat for 30-40 seconds using 850 W, until butter is melted.

MELTING CHOCOLATE

Put 100 g chocolate into a small deep glass dish.
Heat for 3-5 minutes, using 450 W until chocolate is melted.
Stir once or twice during melting. Use oven gloves while taking out!

MELTING CRYSTALLIZED HONEY

Put 20 g crystallized honey into a small deep glass dish.
Heat for 20-30 seconds using 300 W, until honey is melted.

MELTING GELATINE

Lay dry gelatine sheets (10 g) for 5 minutes into cold water.
Put drained gelatine into a small glass pyrex bowl.
Heat for 1 minute using 300 W.
Stir after melting.

COOKING GLAZE/ICING (FOR CAKE AND GATEAUX)

Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water.
Cook uncovered in a glass pyrex bowl for 3 ½ to 4 ½ minutes using 850 W,
until glaze/icing is transparent. Stir twice during cooking.

COOKING JAM

Put 600 g fruits (for example mixed berries) in a suitable sized glass
pyrex bowl with lid. Add 300 g preserving sugar and stir well.
Cook covered for 10-12 minutes using 850 W.
Stir several times during cooking. Empty directly into small jam
glasses with twist-off lids. Stand on lid for 5 minutes.

COOKING PUDDING

Mix pudding powder with sugar and milk (500 ml) by following the
manufacturers instructions and stir well. Use a suitable sized glass pyrex
bowl with lid. Cook covered for 6 ½ to 7 ½ minutes using 850 W.
Stir several times well during cooking.

BROWNING ALMOND SLICES

Spread 30 g sliced almonds evenly on a medium sized ceramic plate.
Stir several times during browning for 3 ½ to 4 ½ minutes using 600 W.
Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!

Cleaning Your Microwave Oven

*The following parts of your microwave oven should be cleaned
regularly to prevent grease and food particles from building up:*

- *Inside and outside surfaces*
- *Door and door seals*
- *Turntable and Roller rings*



ALWAYS ensure that the door seals are clean and that the door
closes properly.



Failure to maintain the oven in a clean condition could lead to
deterioration of the surface that could adversely affect the of the
appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
2. Remove any splashes or stains on the inside surfaces or on the roller ring with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice on the turntable and heat for ten minutes at maximum power.
4. Wash the dishwasher-safe plate whenever necessary.



DO NOT spill water in the vents. NEVER use any abrasive
products or chemical solvents. Take particular care when cleaning
the door seals to ensure that no particles:

- Accumulate
- Prevent the door from closing correctly

Storing and Repairing Your Microwave Oven

GB

A few simple precautions should be taken when storing or having your microwave oven serviced.

The oven must not be used if the door or door seals are damaged:

- *Broken hinge*
- *Deteriorated seals*
- *Distorted or bent oven casing*

Only a qualified microwave service technician can repair this oven.



NEVER remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:

- Unplug it from the wall socket
- Contact the nearest after-sales service centre



If you wish to store your oven away temporarily, choose a dry, dust-free place.

Reason: Dust and damp may adversely affect the working parts in the oven.



This microwave oven is not intended for commercial use.

Technical Specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	M1827N / M1817N
Power source	220V ~ 50 Hz
Power consumption Microwave	1250 W
Output power	100 W / 850 W (IEC-705)
Operating frequency	2450 MHz
Magnetron	OM75P(31)
Cooling method	Cooling fan motor
Dimensions (W x H x D) Outside Oven cavity	489 x 275 x 397 mm 330 x 211 x 329 mm
Volume	23 liter
Weight Net	13.5 kg approx

—
•
—
•
—
•
—

GB

•

•

•

•

